




# D4 SERIES Printer

## User Manual

D4-250 / D4-350

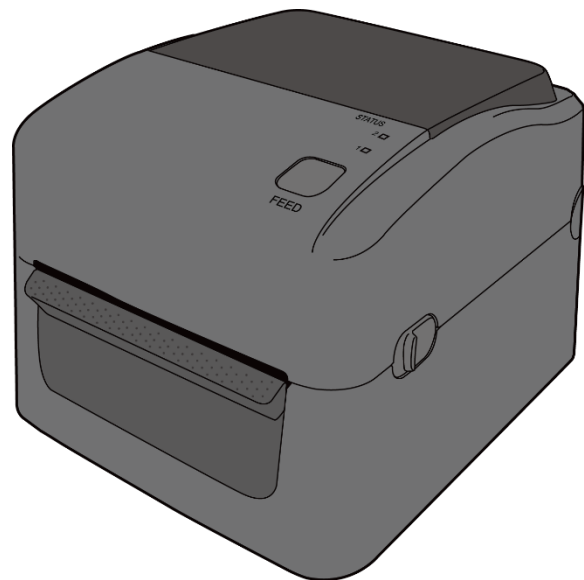

<http://www.argo.com>  
[service@argo.com](mailto:service@argo.com)

Version: 1.4  
Date: Oct. 15, 2020

## Revision History

Changes to the user manual are listed below:

<b>Version</b>	<b>Date (Y/M/D)</b>	<b>Description</b>	<b>Page #</b>
1.0	2018/6/20	Initial release	
1.3	2020/8/19	Added the Communications property of Bluetooth	59
1.4	2020/10/15	Kept update the specifications	52

## **FCC ID**

In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

## **FCC Warning**

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions in this manual, it may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

## **FCC Statement for Optional RF module**

This device complies with RF radiation exposure limits set forth for an uncontrolled environment.

The antenna used for this transmitter must be installed to provide a separation distance of at least 20 cm from all people and must not be collocated or operating in conjunction with any other antenna or transmitter.

## Bluetooth/Wireless LAN Communication

### Compliance Statement

This product has been certified for compliance with the relevant radio interference regulations of your country or region. To make sure continued compliance, do not:

- Disassemble or modify this product.
- Remove the certificate label (serial number seal) affixed to this product.

Use of this product near microwave and/or other Wireless LAN LAN equipment, or where static electricity or radio interference is present, may shorten the communication distance, or even disable communication.

## WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

(for USA only)

## **Liability Disclaimer**

ARGOX Corporation takes steps to assure that the company's published engineering specifications and manuals are correct; however, errors do occur. ARGOX reserves the right to correct any such errors and disclaims any resulting liability. In no event shall ARGOX or anyone else involved in the creation, production, or delivery of the accompanying product (including hardware and software) be liable for any damages whatsoever (including, without limitation, damages for loss of business profits, business interruption, loss of business information, or other pecuniary loss) arising out of the use of or the results of use of or inability to use such product, even if ARGOX has been advised of the possibility of such damages.

## **Caution**

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

# Contents

1	Introduction .....	2
1.1	Features.....	2
1.2	Unpacking.....	2
1.3	Understand your printer .....	3
1.3.1	Perspective view .....	3
1.3.2	Back view .....	4
1.3.3	Interior view .....	5
1.4	Printer lights.....	6
1.4.1	Status lights.....	6
1.4.2	System mode.....	9
2	Get started .....	10
2.1	Attach the power cord .....	10
2.2	Turn on/off your printer .....	11
2.2.1	Turn on your printer.....	11
2.2.2	Turn off your printer .....	12
2.3	Load media.....	13
2.3.1	Prepare media.....	13
2.3.2	Place a media roll.....	14
2.3.3	Test media feed .....	17
2.4	Media types.....	18
2.5	Media sensing .....	20
2.5.1	Transmissive sensor .....	20
2.5.2	Reflective sensor .....	21
3	Printer operation.....	22
3.1	Printing Media Calibration & Configuration .....	22
3.2	Self test.....	23
3.3	Reset your printer .....	29
3.4	Communications .....	30
3.4.1	Interfaces and Requirements.....	30
3.5	Driver installation.....	32
3.5.1	Installing a Plug and Play printer driver (for USB only).....	33
3.5.2	Installing a Printer Driver (for other interfaces except USB).....	38
4	Maintenance .....	44
4.1	Cleaning.....	44
4.1.1	Printhead.....	44
4.1.2	Media housing .....	45

4.1.3	Sensor.....	46
4.1.4	Platen roller.....	47
5	Troubleshooting .....	48
5.1	Printer issues .....	48
5.2	Media issues.....	49
5.3	Other issues.....	50
6	Specifications .....	51
6.1	Printer.....	51
6.2	Media .....	53
6.3	Fonts, Barcodes, and Graphics Specification .....	54
6.4	Wireless LAN(Optional).....	57
6.5	Bluetooth (Optional) .....	59
6.6	Ethernet .....	60
6.7	Electrical and operating environment.....	60
6.8	Physical dimension .....	60
6.9	Interfaces.....	61
6.9.1	USB .....	61
6.9.2	Ethernet .....	62
6.9.3	RS-232C.....	63

# 1 Introduction

Thank you for purchasing a ARGOX D4 printer. This manual provides information about how to set up and operate your printer, load the media and solve common problems.


## 1.1 Features

- **Various Connectivity Options** USB, Ethernet, RS-232
- **Easy Operation** One-button design for easy control
- **Fast Print Speed** Max 6 inches/sec
- **Wireless LAN Connection** Build a Wireless LAN printing environment with Bluetooth
- **External Memory** The extra USB port allows you to use a USB flash drive for storage




## 1.2 Unpacking


Make sure all of the following items are included in your package.

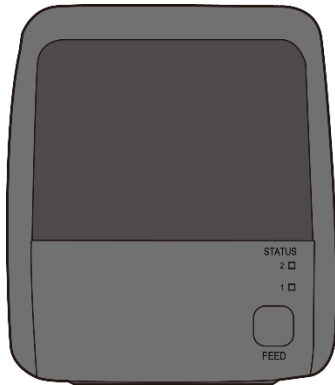


ARGOX D4 Printer

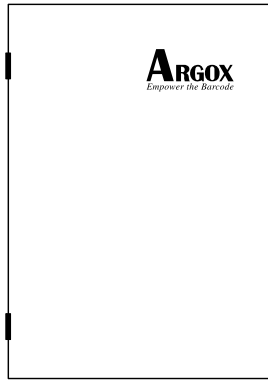


Quick Installation Guide

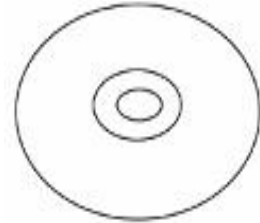

DVD

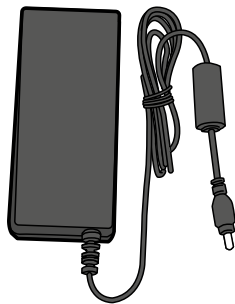

Power Supply

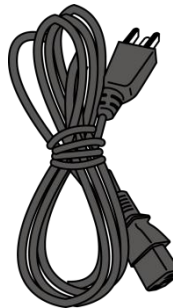

AC Power Cord


When you receive the printer, open the package immediately and inspect for shipping damage. If you discover any damage, contact the shipping company and file a claim. ARGOX is not responsible for any damage incurred during shipping. Save all package materials for the shipping company to inspect.




**Note** If any item is missing, please contact your local dealer.

## 1.3 Understand your printer

### 1.3.1 Perspective view

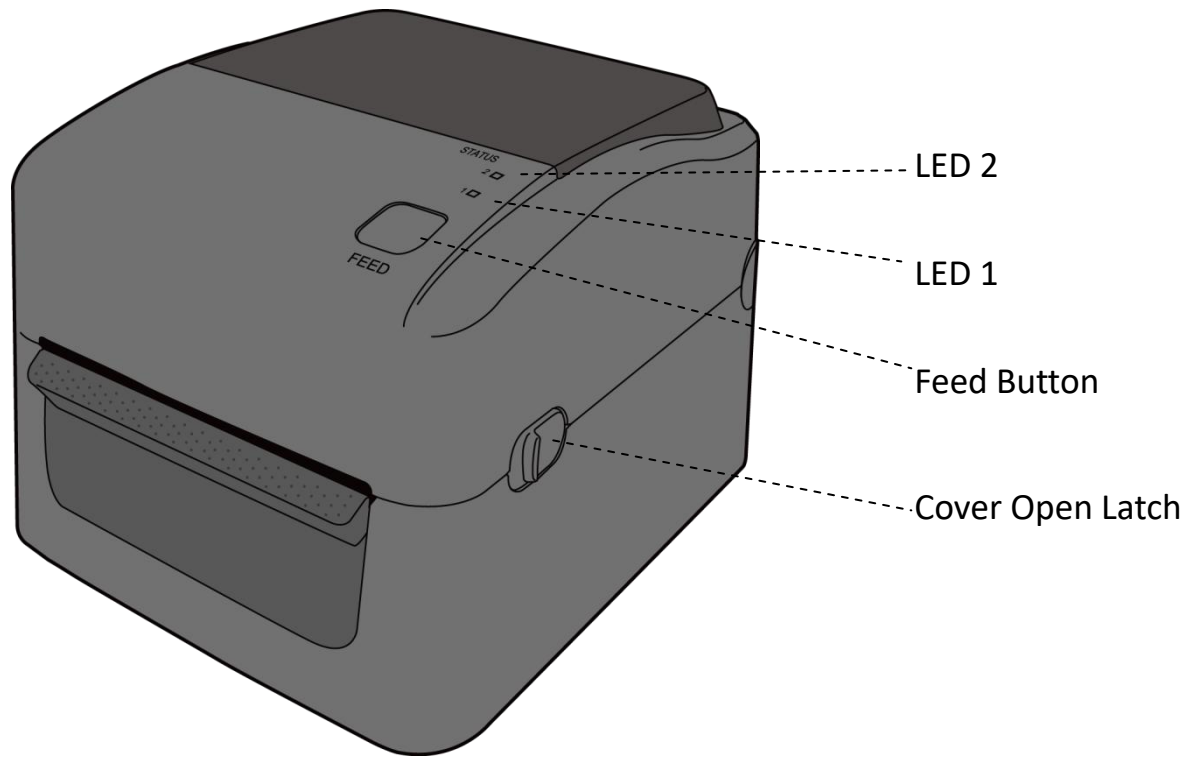

## 1.3.2 Back view

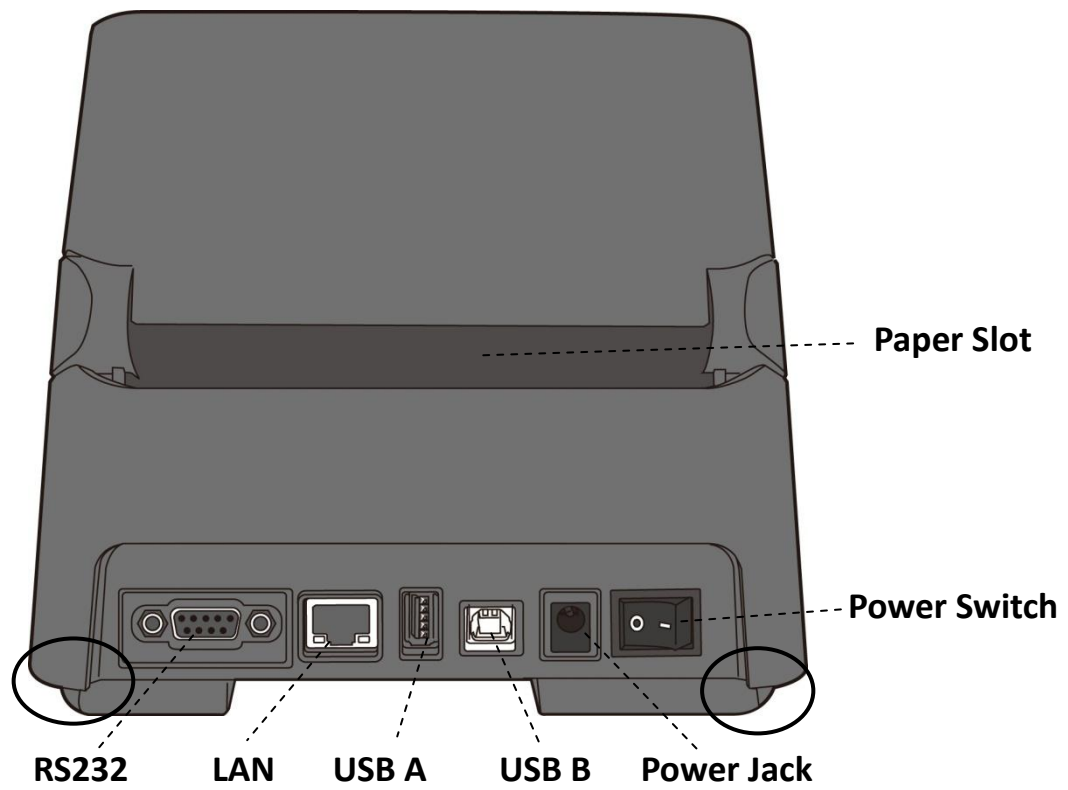


**Caution** The areas indicated by the ellipse have sharp edges. To avoid injury, be careful not to touch them when handling the printer.



**Caution** To avoid injury, be careful not to trap your fingers in the Paper Slot while opening or closing the Top Cover.

### 1.3.3 Interior view

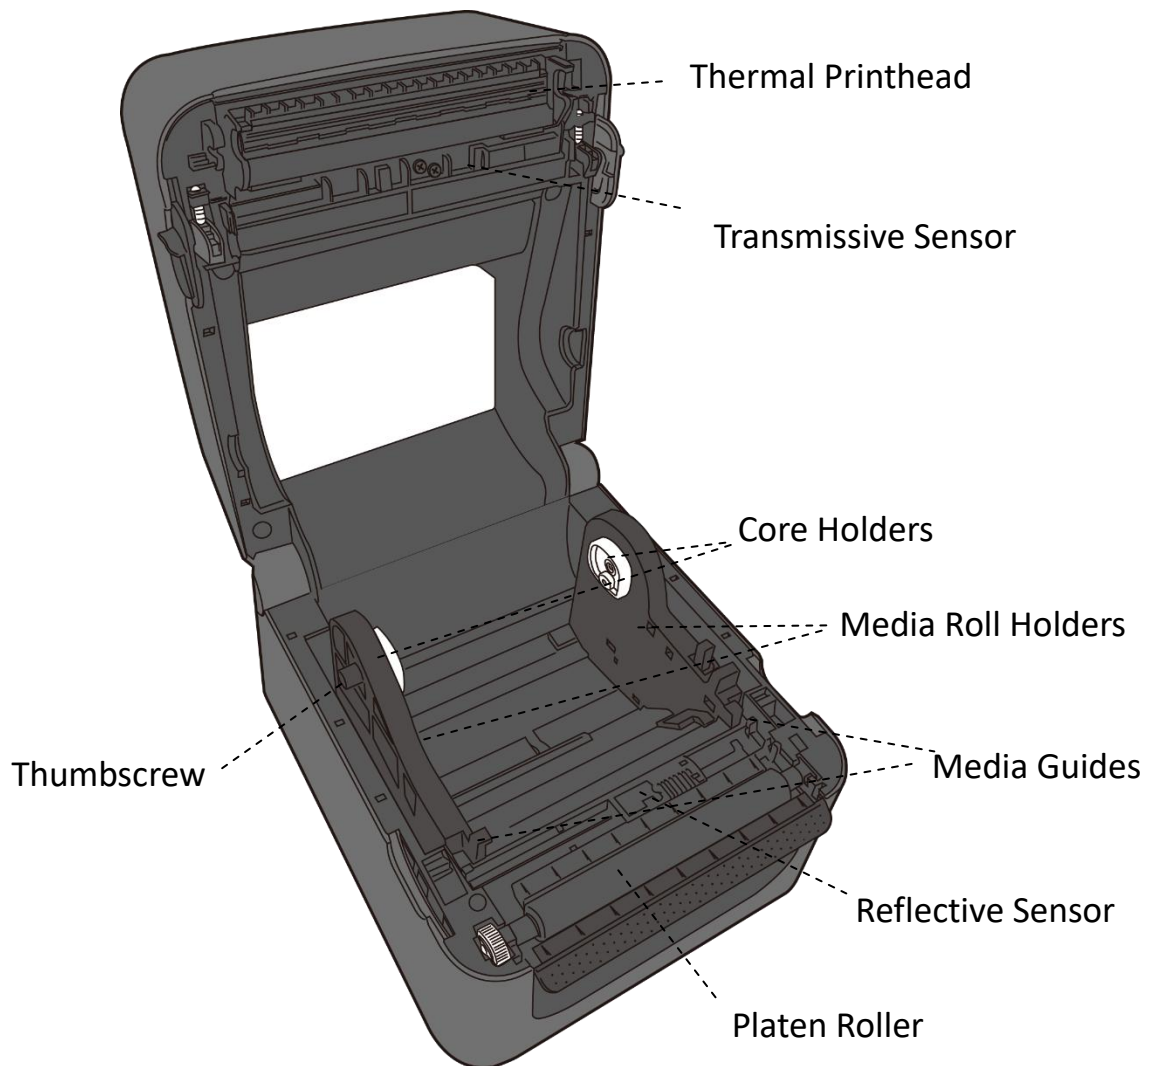




**Warning** The printhead becomes very hot during printing. Do not touch the printhead or touch around it directly after printing. By doing so you may get burnt.



## 1.4 Printer lights









There are two LED lights that show the status of your printer.



### 1.4.1 Status lights

Status lights help you check printer's condition. The following tables show the blinking speed of status lights and the conditions they indicate.

LED image	Blinking Speed	Blinking Interval
	Lightening	Always on
	Slow	0.8 Seconds
	Fast	0.2 Second

LED image	Blinking Pattern description
	Alternate blinking.
	Blinking at the same time.

Blinking pattern	LED 2	LED 1	Description
	Green	Green	The printer is ready to print.
	Green	Green	In pause.
	Green	Green	The printer is transmitting data.
	Green	Green	TPH high temperature.
	Green	Green	The printer is writing data to the flash or USB memory. The USB memory is being initialized.
	Amber	Amber	Paper jam. The media is out when the print data sent to the printer. Paper end.
	Red	Red	H/W Error
			The printhead is broken.
			Communication error (RS-232C).
			Cutter error (with optional cutter).
	Red	Red	Command Error
			An EEPROM for backup cannot be read or written properly.
			A command has been fetched from an odd address.
			Word data has been accessed from a place other than the boundary of the word data.
			Long word data has been accessed from a place other than the boundary of the long word data.
Command error.			

	<b>Red</b>	<b>Red</b>	Top Cover Open	The print module is opened when the printer is turned on.
				Cover (Thermal Head) open error during printing.
	<b>Red</b>	<b>Red</b>	USB R/W Error	Flash ROM on the CPU board error or USB memory error.
				An erase error has occurred when formatting the USB memory.
				Unable to save files due to insufficient USB memory.

## 1.4.2 System mode

The system mode consists of status light color combinations. It contains a list of commands for you to select and run.

To enter the system mode and run the command, do the following:

1. Turn off the printer.
2. Press and hold the **FEED** button, and turn on the printer.
3. Both status lights glow solid amber for a few seconds. Next, they turn to green shortly, and then turn to other colors.
4. When status lights show the color combination you need, release the **FEED** button immediately.
5. Press the **FEED** button to run the command.

The following table is the command list of the system mode.

LED 2	LED 1	Command
Red	Green	Transmissive Sensor Calibration ( <a href="#">Section 3.1</a> )
Amber	Green	Reflective Sensor Calibration ( <a href="#">Section 3.1</a> )
Red	Red	Resetting Your Printer ( <a href="#">Section 3.3</a> )
Amber	Red	Reserved
Green	Red	Disable Checking RTC Battery Charge
Red	Amber	Reserved
Green	Amber	Self Test ( <a href="#">Section 3.2</a> )



## 2 Get started

This chapter describes how to set up your printer.



**Caution** Do not use your printer in areas exposed to splashing water or any other liquid.




**Caution** Do not drop your printer, or place it in an area subject to humidity, vibration or shock.

### 2.1 Attach the power cord

1. Make sure the power switch is set to the **OFF** position.
2. Insert the power supply's connector into the printer power jack.
3. Insert the AC power cord into the power supply.
4. Plug the other end of the AC power cord into the wall socket.

**Important** Use only power supplies listed in the user instructions.

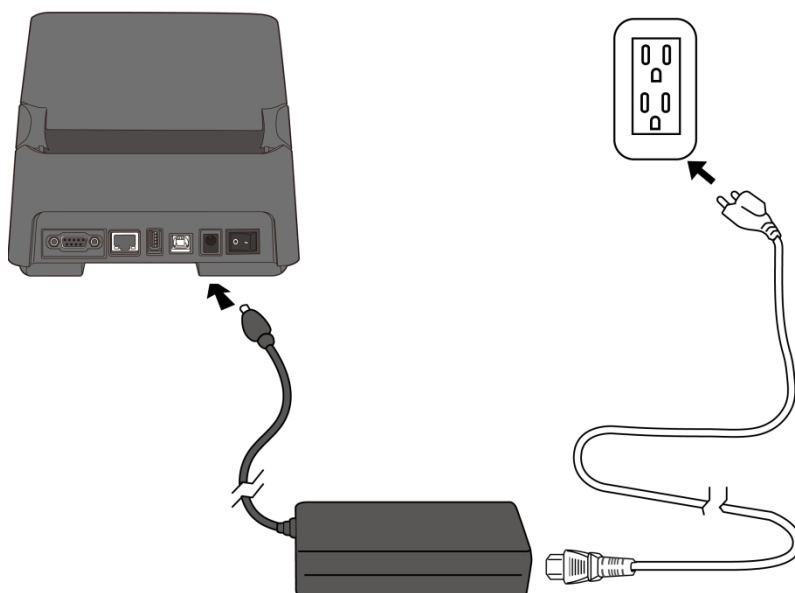


**Warning** Do not plug the AC power cord with wet hands, or operate the printer and the power supply in an area where they may get wet. Serious injury may result from these actions!

## 2.2 Turn on/off your printer

When your printer is connected to a host (a computer), it is good to turn on the printer before turning on the host, and turn off the host before turning off the printer.

### 2.2.1 Turn on your printer

1. To turn on your printer, turn on the **Power Switch** as below. The “I” is the **ON** position.

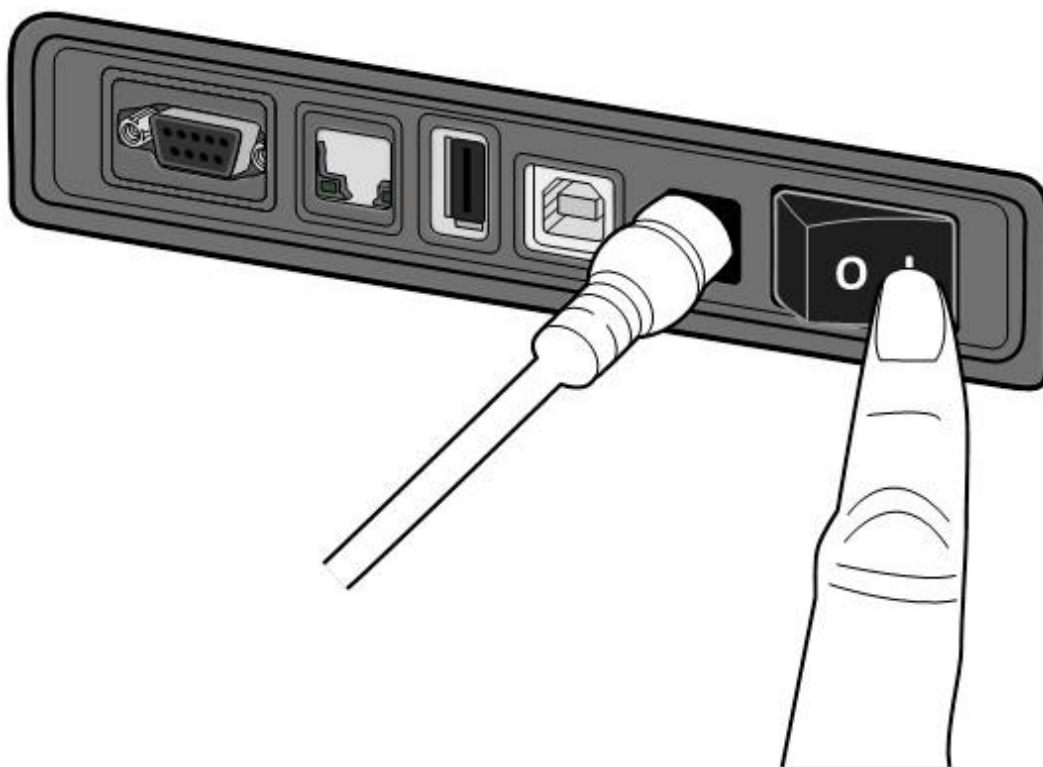


2. Both status lights glow solid amber for a few seconds, and then LED 2 goes out, while LED 1 turns to solid green.



**Note** If you connect the printer to the internet or insert a USB drive before turning on the printer, it will take longer for the printer to enter the online mode (LED 1 glows solid green) after you turn it on.

## 2.2.2 Turn off your printer

1. Make sure LED 2 is off and LED 1 is solid green before turning off the printer.
2. To turn off your printer, turn off the **Power Switch** as below. The “O” is the **OFF** position.

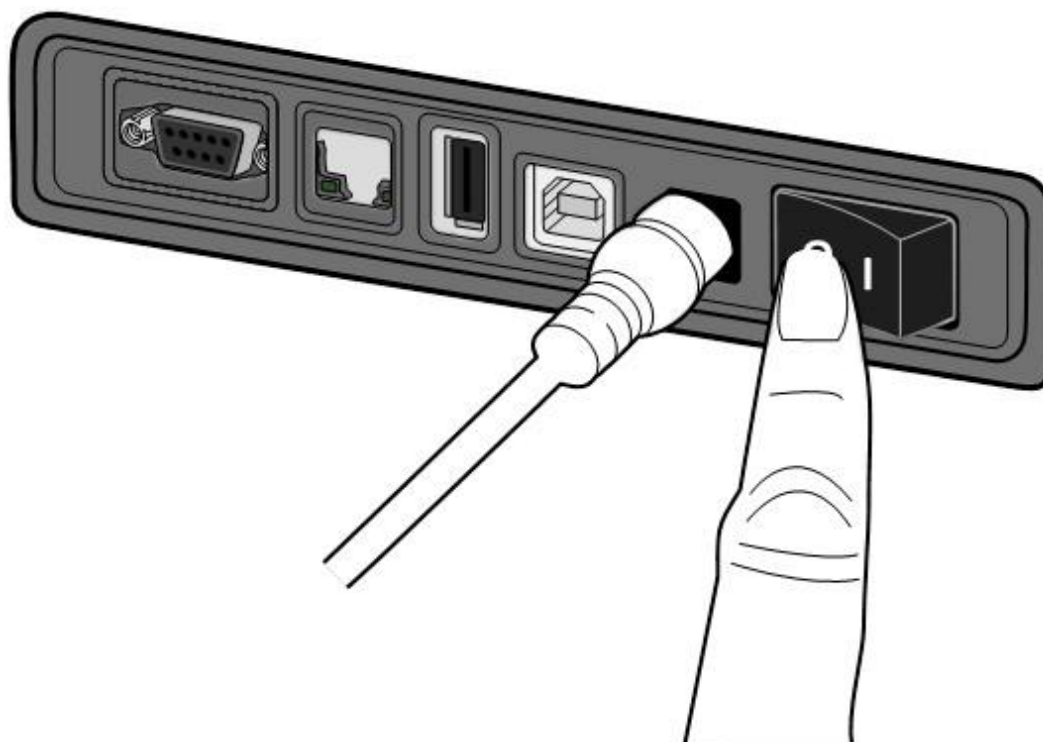


**Caution** Do not turn off your printer during data transmission.

## 2.3 Load media

There are various types and sizes for the media roll. Load the applicable media to satisfy your need.

### 2.3.1 Prepare media

The inside wound and outside wound media roll can be loaded into the printer the same way. In case the media roll is dirty during shipping, handling or storage, remove the outside length of the media. It helps avoid dragging adhesive and dirty media between the printhead and platen roller.

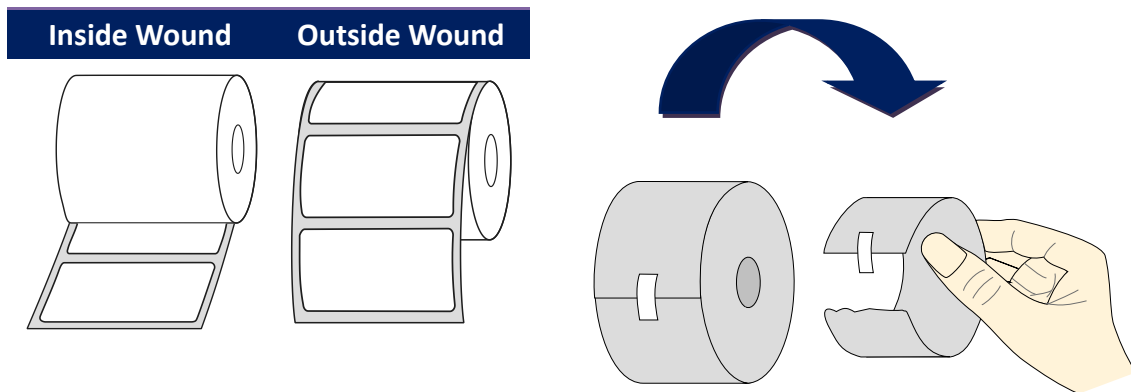

## 2.3.2 Place a media roll

1. Open the top cover of the printer.




2. Press the holder lock on the **Media Roll Holders** to slide them outward, and place the media roll between the holders. Make sure the print side is up, and the media roll is clamped tightly by the holders.

**Note** The default core holder is set for 1-inch inside diameter (ID). To install a 1.5-inch ID media roll, use your hand or a coin to loosen two thumbscrews on both holders, flip the core holders horizontally and secure them back.


2 Get started

Load media

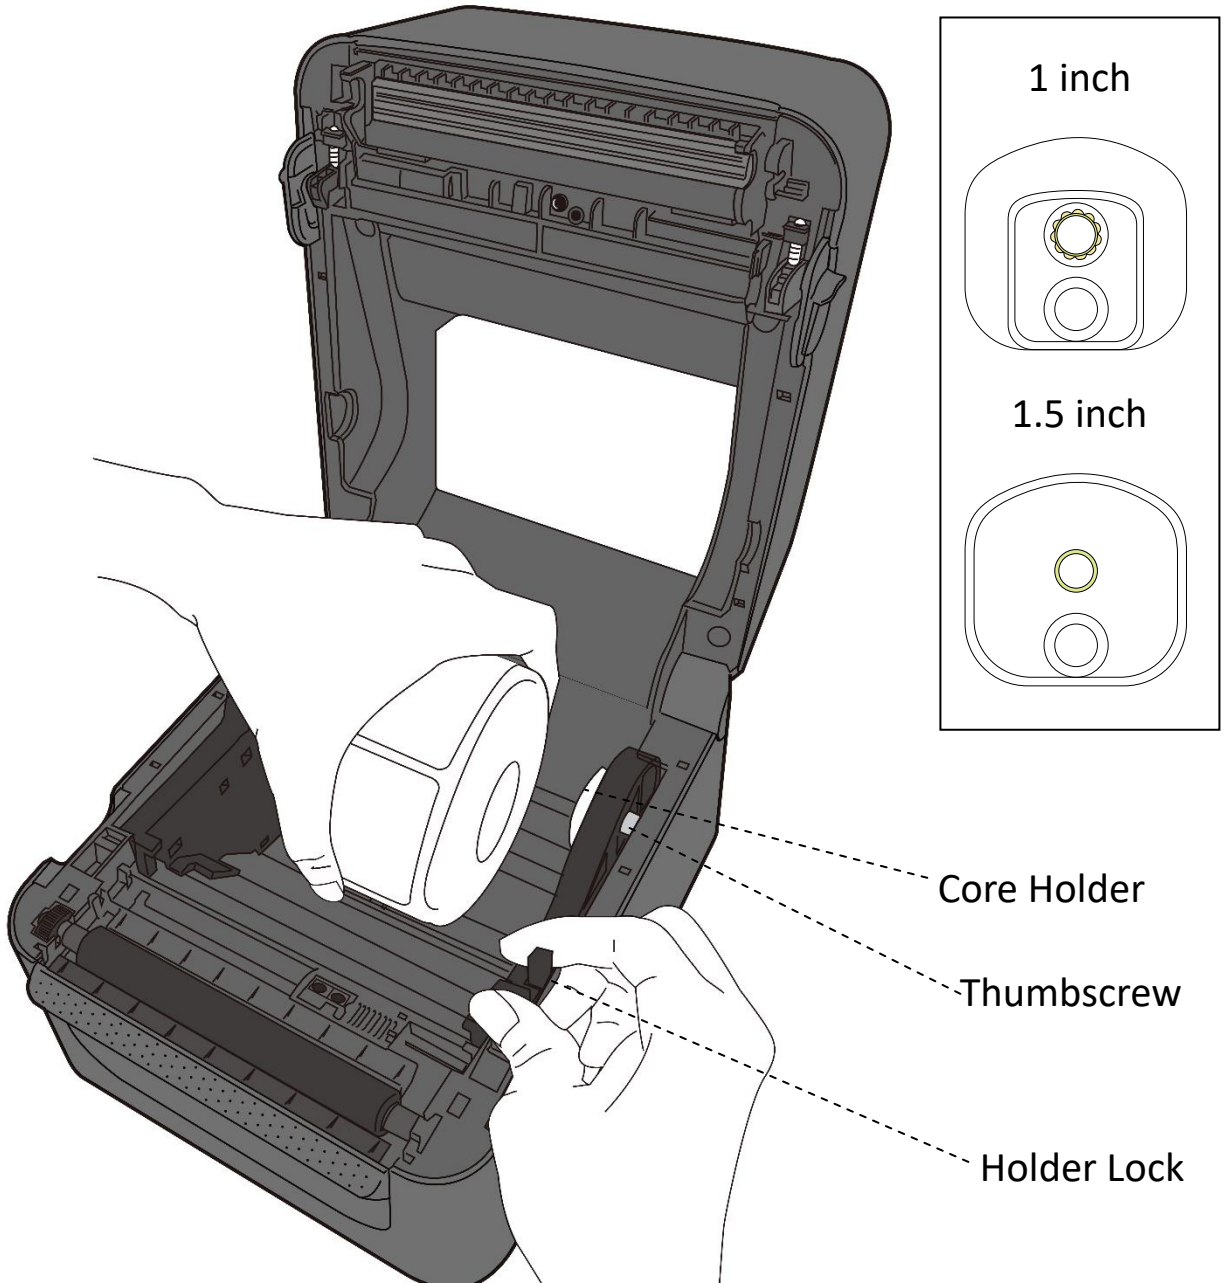

3. Pull the media until it reaches out of the printer. Thread the media under the media guides.

**Caution** Do not ship or bring the printer while it holds a label roll.

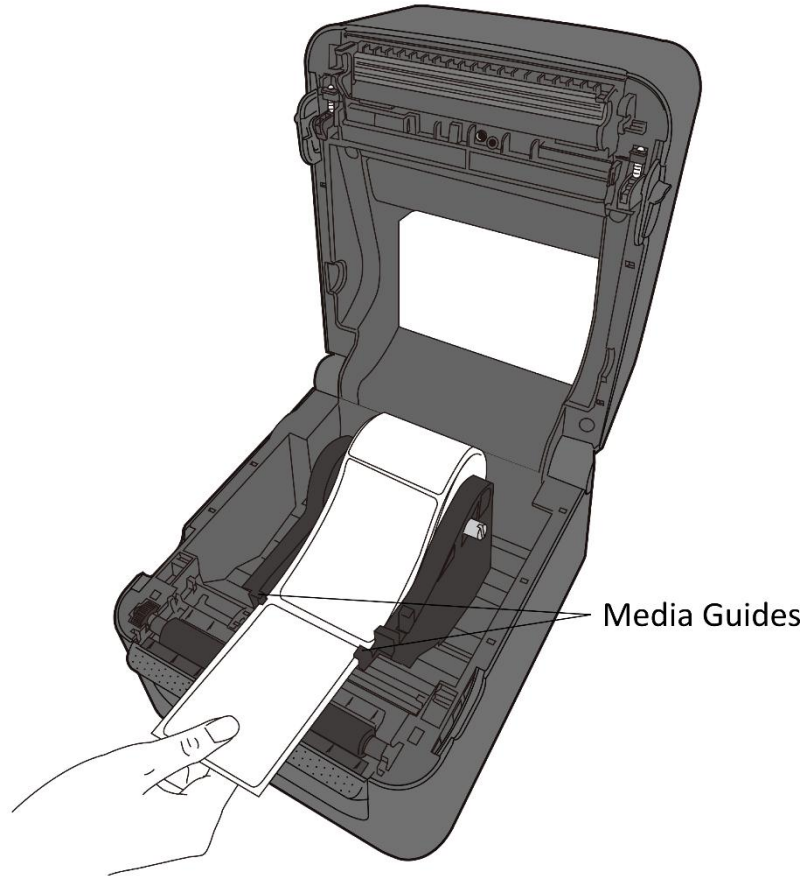


4. Close the top cover.




### 2.3.3 Test media feed

1. Turn on the printer, and press the **FEED** button to feed a label.

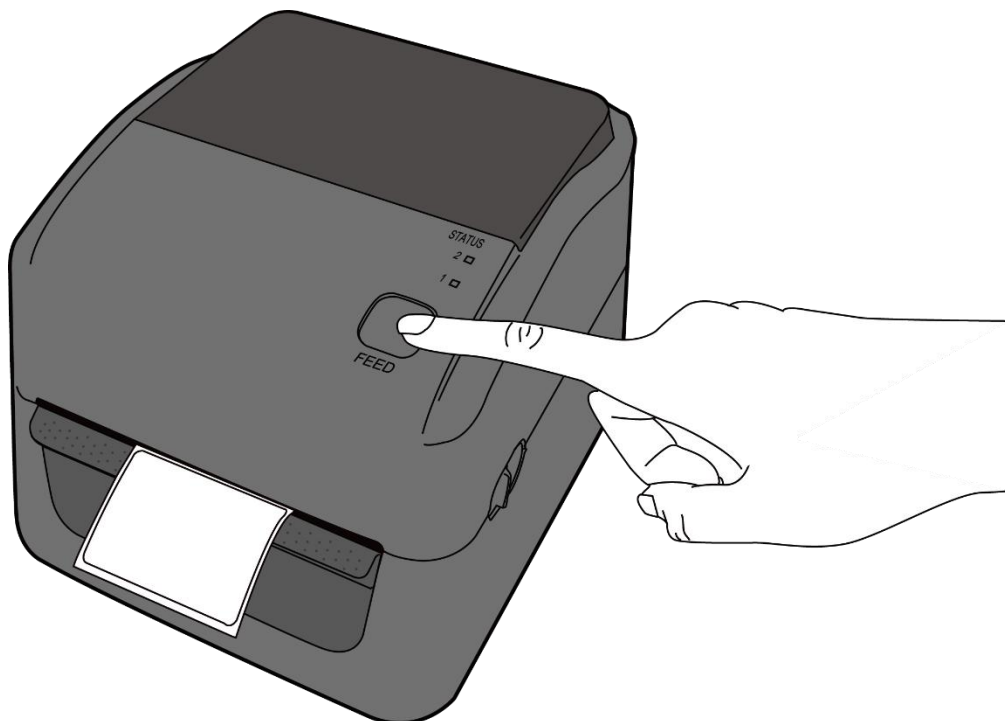




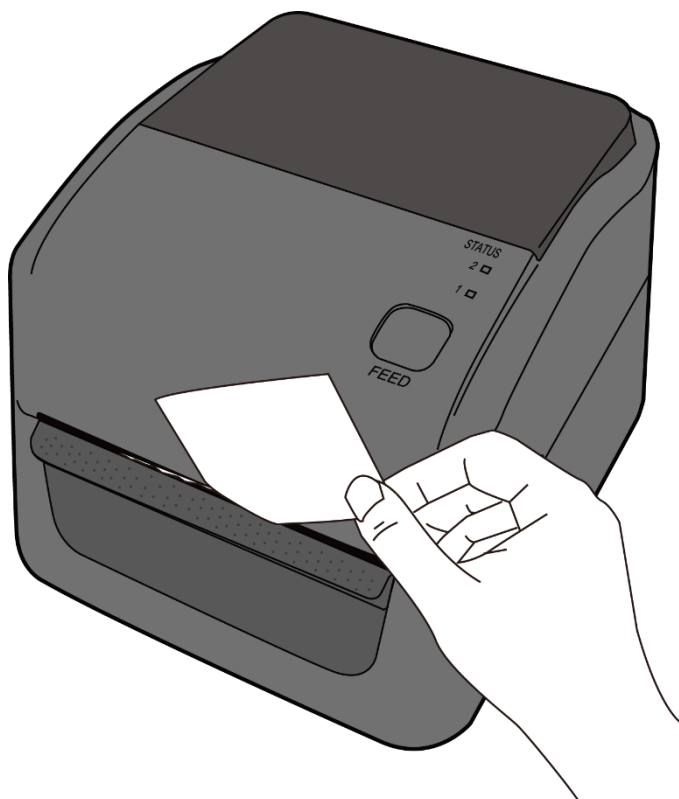


2. Flip the media and tear it along the edge of the top cover.






## 2.4 Media types

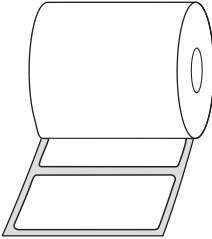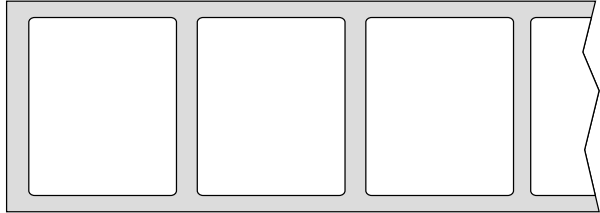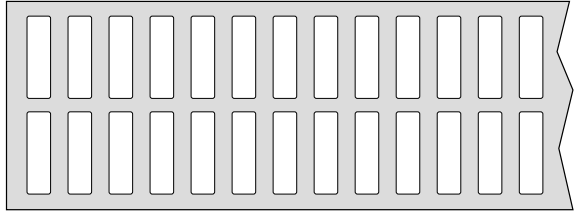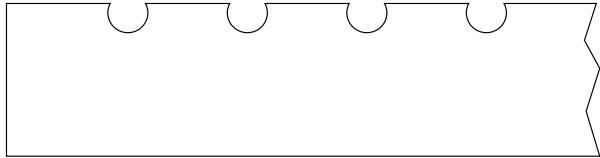Your printer supports various media types, including non-continuous media, continuous media, and fanfold media. The following table provides details about them.

Media Type	Looks Like	Description
<p><b>Non-Continuous Media</b></p>	          	<p>Non-continuous media is the typical media for bar code printing. Labels and tags are made of various materials, such as paper, fabric or cardstock, and are separated by gaps, holes, notches or black marks. Many labels are self-adhesive with liners, while some are linerless.</p>

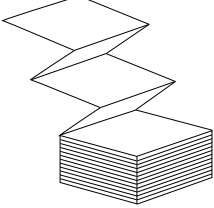
Media Type	Looks Like	Description
<b>Fanfold Media</b>		Fanfold media is in continuous form, but it can be used as non-continuous media, because its labels are separated by folds. Some fanfold media also has black marks or liners.

## 2.5 Media sensing

D4 printers offer two types of media sensor: transmissive and reflective. They are used for detecting specific media types.


### 2.5.1 Transmissive sensor

The transmissive sensor is fixed and placed near the center of the printhead. It is used for detecting gaps across the entire width of the label.

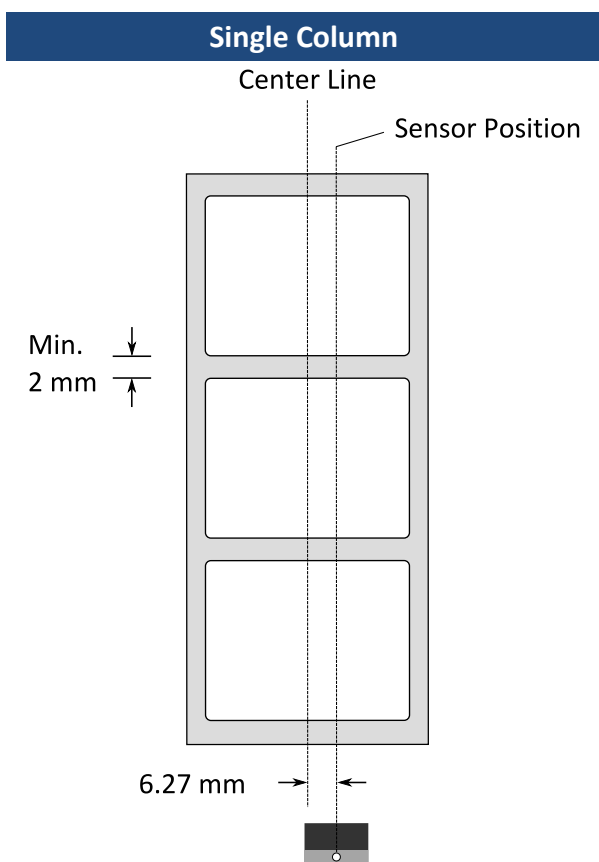


## 2.5.2 Reflective sensor

The reflective sensor is movable within the entire width of the media. It detects gaps, notches and black marks not located at the center of the media.

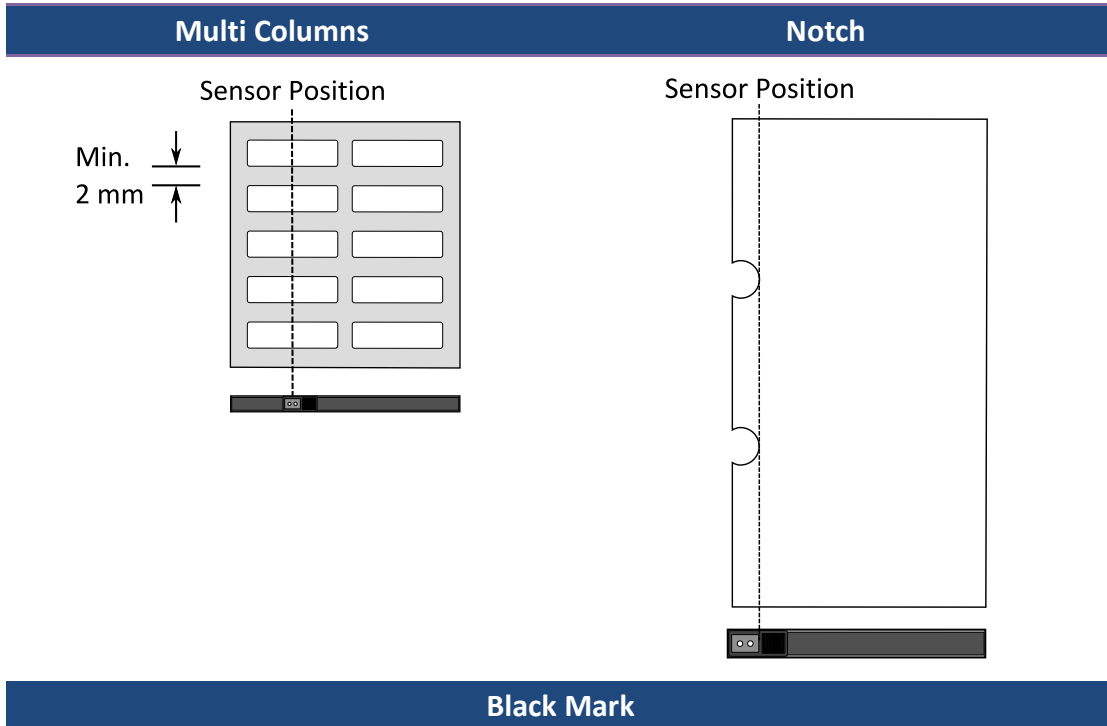

Flip the media so the black-mark side is facing down to align with the sensor.

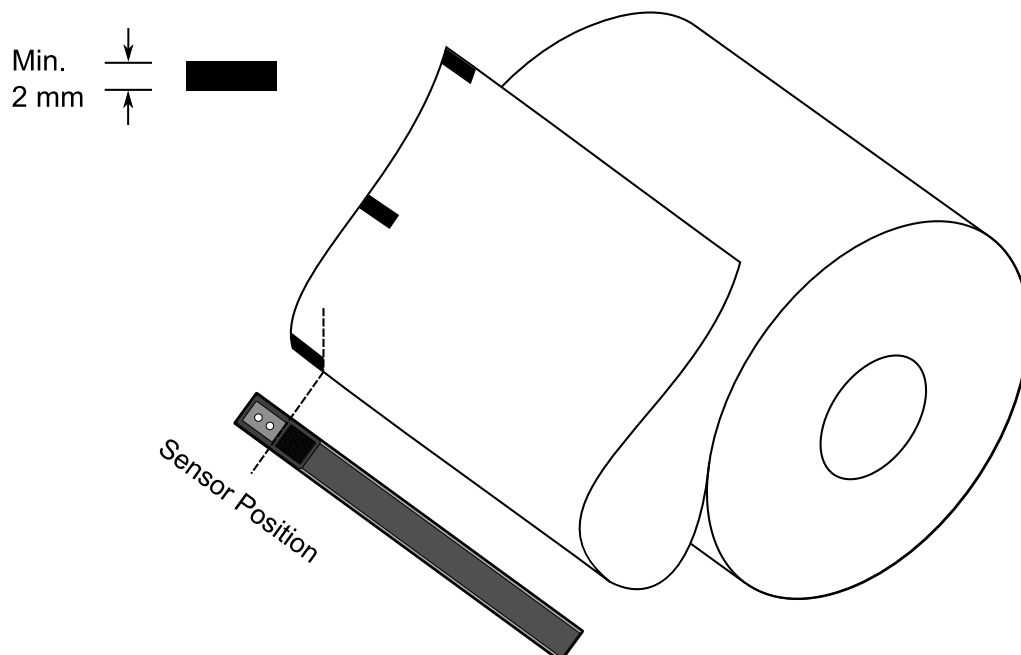

# 3 Printer operation

This chapter provides information about printer operation.

## 3.1 Printing Media Calibration & Configuration

You will want the printer to work properly before starting your print jobs. To do this, you need to calibrate the media sensor. Printers provide transmissive and reflective sensor calibration. Take the following steps to use them.

1. Make sure the media is properly loaded, the print module is closed, and the printer's power switch is set to the **OFF** position.
2. Press and hold the **FEED** button, and turn on the printer.
3. Both status lights glow solid amber for a few seconds. Next, they turn to green shortly, and then turn to other colors. Do one of the following to select the sensor:
  - If you want to calibrate the transmissive sensor, when LED 2 turns to red and LED 1 turns to green, release the **FEED** button immediately.
  - If you want to calibrate the reflective sensor, when LED 2 turns to amber and LED 1 turns to green, release the **FEED** button immediately.
4. Press the **FEED** button. The media calibration is complete after the printer feeds 3-4 labels and stops.







## 3.2 Self test

The printer can run a self test to print a configuration label, which helps you understand current settings of the printer.

1. Turn off the printer.
2. Press and hold the **FEED** button, and turn on the printer.
3. Both status lights glow solid amber for a few seconds. Next, they turn to green shortly, and then turn to other colors. When LED 2 turns to green and LED 1 turns to amber, release the **FEED** button.
4. Press the **FEED** button to print a configuration label.

Your configuration label should look like this:

```

LABEL PRINTER WITH FIRMWARE
1 D4-250-V01.00 20170119 PPLB
2 STANDARD RAM : 32M BYTES
3 AVAILABLE RAM : 3678K BYTES
4 FLASH TYPE : ON BOARD 16M BYTES
5 AVAILABLE FLASH : 7266K BYTES
6 NO. OF DL SOFT FONTS(FLASH) : 0
7 NO. OF DL SOFT FONTS(RAM) : 0
8 NO. OF DL SOFT FONTS(HOST) : 0
9 H. POSITION ADJUST.: 001A
10 SEE-THRU SENSOR
11 REF: 00D5 SEE: 0125
12 MAX LABEL HEIGHT: 39 INCHES
13 PRINT WIDTH: 812 DOTS
14 LAB LEN(TOP TO TOP): 82mm
15 SPEED: 5 IPS
16 DARKNESS: 8
17 DIRECT THERMAL
18 PRINT LENGTH: 0M
19 CUT COUNT:0
20 RS232: 9600, 8, N, 1P, XON/XOFF
21 CODE PAGE : English (437)
22 MEDIA : NON-CONTINUOUS
23 BACKFEED ENABLED
24 CUTTER DISABLED
25 PEELER DISABLED
26 CUTTER/PEELER OFFSET: 0 <+-0.01mm>
27 IP ADDRESS: 0.0.0.0
28 SUBNET MASK: 0.0.0.0
29 GATEWAY: 0.0.0.0
30 MAC ADDRESS: 00-00-00-00-00-00
31 DHCP: ENABLED
32 DHCP CLIENT ID: FFFFFFFFFFFFFFFF
                    FFFFFFFFFFFFFFFF
33 DHCP HOST NAME:
34 SNMP: ENABLED
35 SOCKET COMM.: ENABLED
36 SOCKET PORT: 9100
37 IPV6 MODE: MANUAL
38 IPV6 TYPE: NONE
39 IPV6 ADDRESS: 0000:0000:0000:0000:
                    0000:0000:0000:0000:
40 LINK LOCAL : 0000:0000:0000:0000:
                    0000:0000:0000:0000:
41 PRODUCT SN: 00000000002
42 USB SN: 000000000001
43 CG ENABLED
44 ot(0,0)<0.1dot,0.01mm>
45 rm(0,0)<1+ 0-,0.01mm>
46 sm(0,0)<1+ 0-,0.01mm>
47 rv(246,154,91)<0.01v><P>
48 sv(299,222,76)<0.01v><P>
49 rso(0)<0.01mm>
50 sso(0)<0.01mm>
51 This is internal font 1. 0123456789 ABCabcXyz
52 This is internal font 2. 0123456789 ABCabcXyz
53 This is internal font 3. 0123456789 ABCabcXyz
54 This is internal font 4. 0123456789 ABCXYZ
56 THIS IS INTERNAL FONT
57 
58 
59 
60 
61 
62 

```

**1. Version Information**

The firmware version and its build date.

**2. Standard RAM**

Display SDRAM size.

**3. Available RAM**

RAM is able to be used.

**4. Flash Type**

The flash memory type and size.

**5. Available Flash**

Flash is able to be used.

**6. No of DL soft fonts (FLASH)**

The number of fonts is downloaded in Flash.

**7. No of DL soft fonts (RAM)**

The number of fonts is downloaded in RAM.

**8. No of DL soft fonts (HOST)**

The number of fonts is downloaded in USB HOST.

**9. H. Position Adjust**

Move the print position horizontally.

**10. Sensor Type**

Two kinds of media sensor type, reflective sensor and see-through sensor.

**11. Label-less Calibration Value**

Check if a label-less calibration has been performed on the printer. If not, the value is 0000.

**12. Max Label Height**

The max label length you can print at a time. For 200 dpi models, it is 100 inches; for 300 dpi models, it is 50 inches.

**13. Print Width**

Display the print width in dots.

**14. Lab Len (Top to Top)**

For non-continues media, it is the length between the tops of two labels.

**15. Speed**

Printing speed unit is inch per second (ips).

**16. Darkness**

Display the current darkness.



**17. Print Method**

It is direct thermal printing.

**18. Print Length**

Display total print length.

**19. Cut Count**

It counts the times the cutter cuts.

**20. RS232 Protocol**

It lists RS-232C settings in the following order: baud rate, data length, parity check, stop bit and flow control.

**21. Code page**

The character set table.

**22. Media**

The media type in use.

**23. Backfeed Enabled/Disabled**

Enable or disable backfeed during the printing process. When it is enabled, the printer moves the paper forward in a predefined length 1 second after printing, and pulls the paper back in a predefined length once the printing begins again. When it is disabled, the printer won't move the paper at all.

**24. Cutter Enabled/Disabled**

Enable or disable the cutter during the printing process.

**25. Peeler Enabled/Disabled**

Enable or disable the dispenser during the printing process.

**26. Cutter/Peeler Offset**

Move the cutting line or the peeling position forward or backward. The value in the angle brackets is the offset unit.

**27. IP Address**

Display printer current IP address in. The default value is "192.168.1.1".

**28. Subnet Mask**

Display printer subnet mask. The default value is "255.255.255.0".

**29. Gateway**

Display printer gateway. The default value is "0.0.0.0".

**30. MAC Address**

The unique address assigned to the printer that connects to the internet.

**31. DHCP**

When DHCP is enabled, it assigns a dynamic IP address to the printer automatically.

**32. DHCP Client ID**

It is an arbitrary value sent to the DHCP server to reserve an IP address for the printer.

**33. DHCP Host Name**

It is the name of a DHCP client. The host name allows up to 32 alphanumeric characters.

**34. SNMP**

When it is enabled, the host gets or sets parameters registered as SNMP entities.

**35. Socket Communication**

When it is enabled, the host communicates with the printer via the socket.

**36. Socket Port**

Display printer port number.

**37. IPv6 Mode**

It determines how you get the IPv6 address of your printer. There are three modes: MANUAL, DHCPv6 or AUTO.

**38. IPv6 Type**

It is the IPv6 address type of your printer. There are four types: NONE, NORMAL, EUI and ANY.

**39. IPv6 Address**

Display printer current IPv6 address.

**40. Link Local**

The IPv6 address that used in a network segment. It is allocated automatically.

**41. Product SN**

Display printer serial number.

**42. USB SN**

Display printer USB host serial number.

**43. CG Enable**

Printer is able to use True Type font.

**44. TPH and Cutter Offset**

This is for developers to debug.

**45. Reflective Sensor Gap Calibration**

This is for developers to debug.

**46. See-Through Sensor Gap Calibration**

This is for developers to debug.

**47. Reflective Sensor Profile**

This is for developers to debug.

**48. See-Through Sensor Profile**

This is for developers to debug.

**49. Reflective Sensor Offset**

This is for developers to debug.

**50. See-Through Sensor Offset**

This is for developers to debug.

**51-56. Font Image**

You can use them as the reference to check your label font.

**57-62. TPH Test Pattern**

You can use them to check broken pins on the printhead.

## 3.3 Reset your printer

By resetting your printer, you can return your printer to the state it was in when you receive it. This can help you solve some problems caused by settings changed during the printing.

Do the following to reset your printer:

1. Turn off the printer.
2. Press and hold the **FEED** button, and turn on the printer.
3. Both status lights glow solid amber for a few seconds. Next, they turn to green shortly, and then turn to other colors. When both lights turn to red, release the **FEED** button immediately.
4. Press and hold the **FEED** button for 3 seconds and release it. Both status lights blink red three times, and turn to solid amber for a few seconds. After the printer is reset, LED 2 goes out while LED 1 turns to solid green.



**Important** In step 4, if you do not hold the **FEED** button long enough, LED 2 will blink amber three times while LED 1 goes out. It means the printer is not reset.

## 3.4 Communications

### 3.4.1 Interfaces and Requirements

This printer comes with USB type A and type B interfaces, a nine-pin Electronics Industries Association (EIA) RS-232 serial data interface and an Ethernet module.

#### ■ USB Interface Requirements

The Universal Serial Bus (USB) interface is compatible with your existing PC hardware. The USB's "plug and play" design makes installation easy. Multiple printers can share a single USB port/hub. The different usage of type A and B as below.

USB type A	USB Flash drive, USB keyboard or USB Scanner.
USB type B	PC to set printer.

#### ■ Serial (RS-232) Port

The required cable must have a nine-pin "D" type male connector on one end, which is plugged into serial port located on the back of the printer. The other end of the cable connects to a serial port on the host computer. For technical and pin-out information, please refer to [RS-232C](#) in this manual.

## ■ Ethernet Module Status Indicators

The indicators with two different colors help users understand status of Ethernet:

LED Status	Description	
<b>Both Off</b>	No Ethernet link detected.	
<b>Blinking</b>	The printer waits for printer ready. It will take about few seconds to be ready.	
<b>Green</b>	Speed LED	On: 100 Mbps link Off: 10 Mbps link
<b>Amber</b>	Link/Activity LED	On: link up Off: link down Blinking: activity

## 3.5 Driver installation

The bundled printer driver can be applied to all applications under Windows XP/ Vista/ Windows 7/ Windows 8/ Windows 10, supporting 32-bit/ 64-bit operation systems. With this driver you can operate any popular Windows software applications including Argox Bartender UL label editing software or MS Word, etc., to print to this printer.

We strongly recommend that you use the Seagull Driver Wizard instead of the Microsoft Windows Add Printer Wizard when installing and updating your Drivers by Seagull.

(Even though the "Add Printer Wizard" is from Microsoft, it too easily performs a number of tasks incorrectly when updating existing drivers. It also badly handles the situation where a printer driver is already in use by a Windows application.)

Drivers can be downloaded from Argox website


## 3.5.1 Installing a Plug and Play printer driver (for USB only)

1. Turn off the printer. Plug the power cable into the power socket on the wall, and then connect the other end of the cable to printer's power socket. Connect the USB cable to the USB port on the printer and on the PC.
2. Run the driver from Argox website. On the prompt, Windows Printer Driver, select "I accept..." and click "Next".







3. Assign the directory to keep Seagull driver, (for example: C:\Seagull) and click "Next".

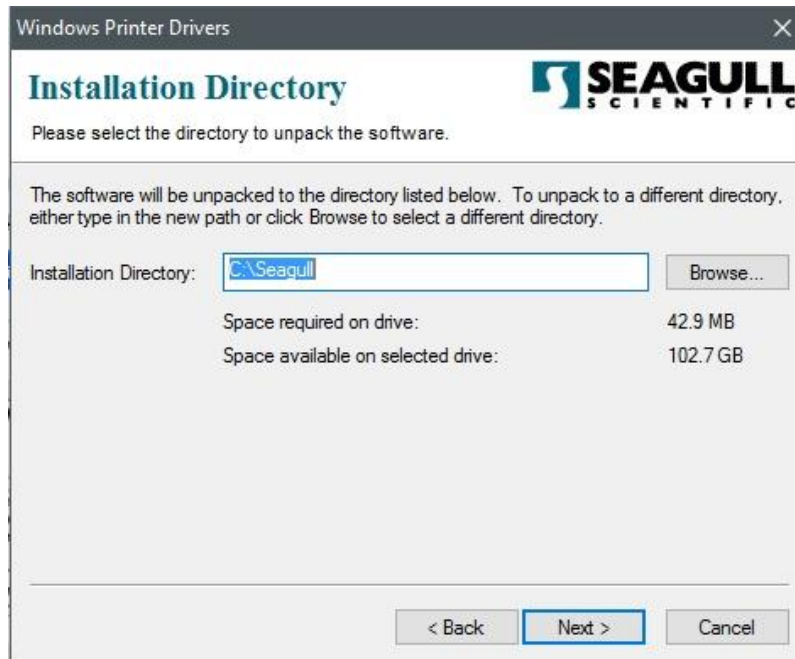


4. Click "Finish".

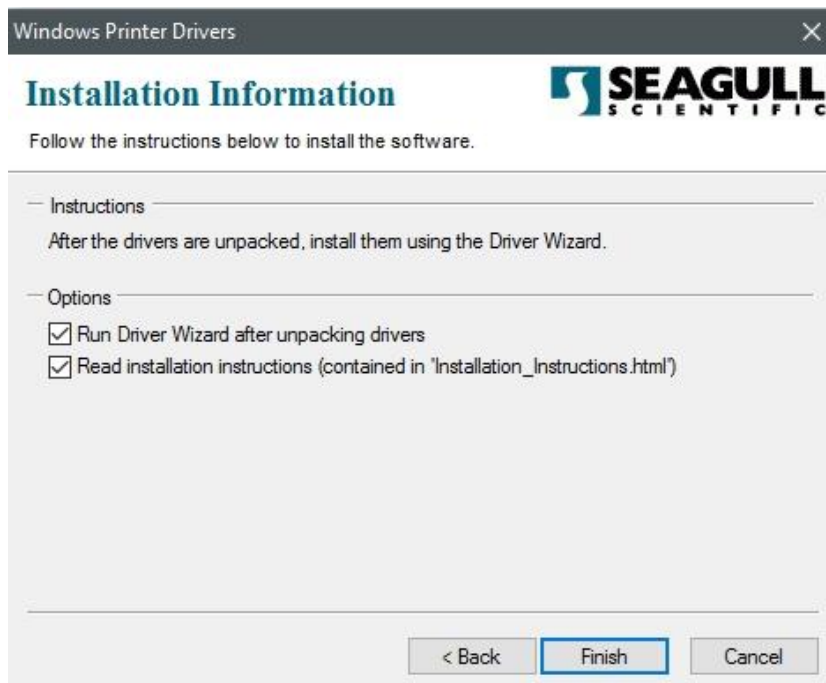


5. Select Install printer drivers and Click "Next"

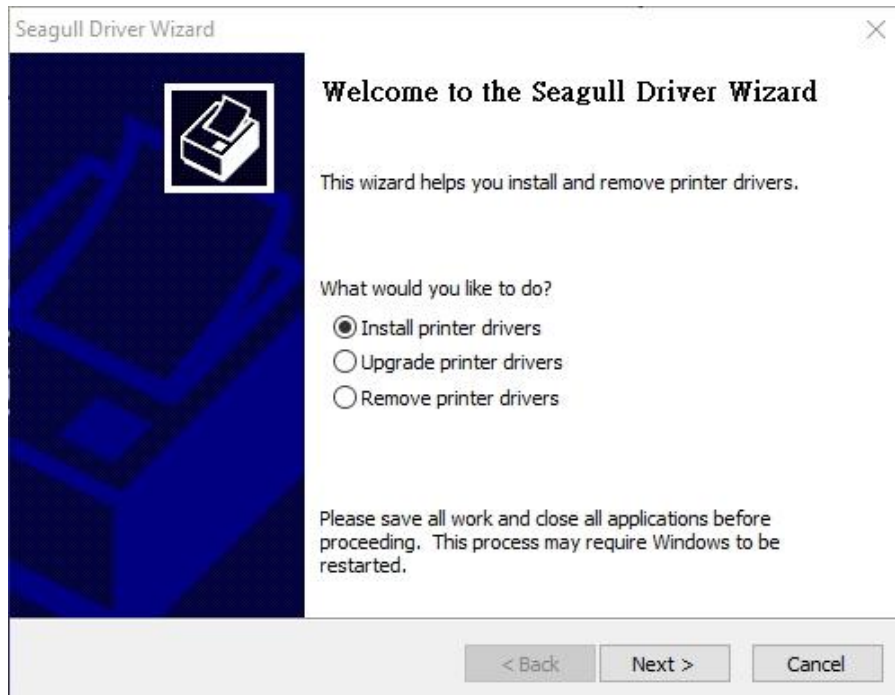

6. On the Seagull Driver Wizard prompt, select the first radio button to "Install a driver for a Plug and Play printer" Then click "Next."

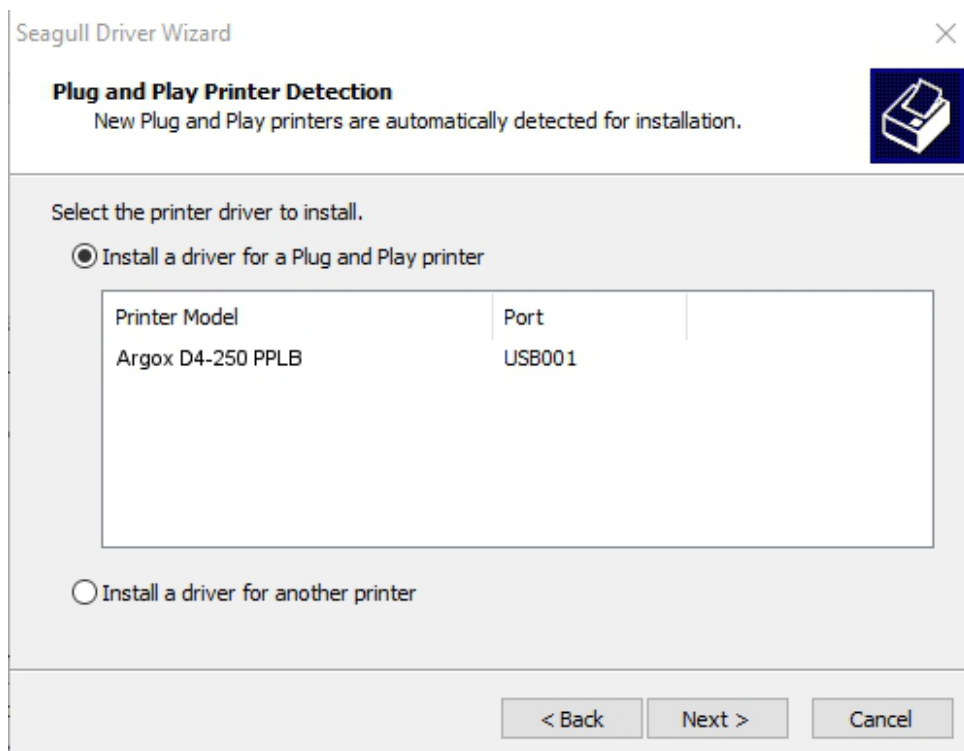

7. Enter Printer name (i.e. Argox D4-250 PPLB) and select "do not share this printer", and click "Next"

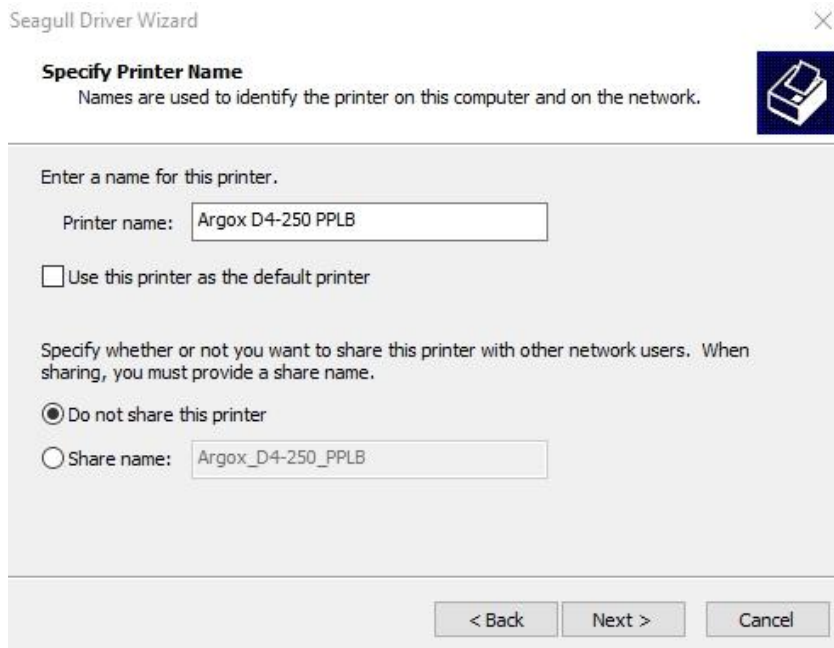

Seagull Driver Wizard

**Specify Printer Name**  
Names are used to identify the printer on this computer and on the network.

Enter a name for this printer.

Printer name:

Use this printer as the default printer


Specify whether or not you want to share this printer with other network users. When sharing, you must provide a share name.

Do not share this printer

Share name:

< Back    Next >    Cancel

8. Check all the data on the showing screen, if it is correct, click "Finish".

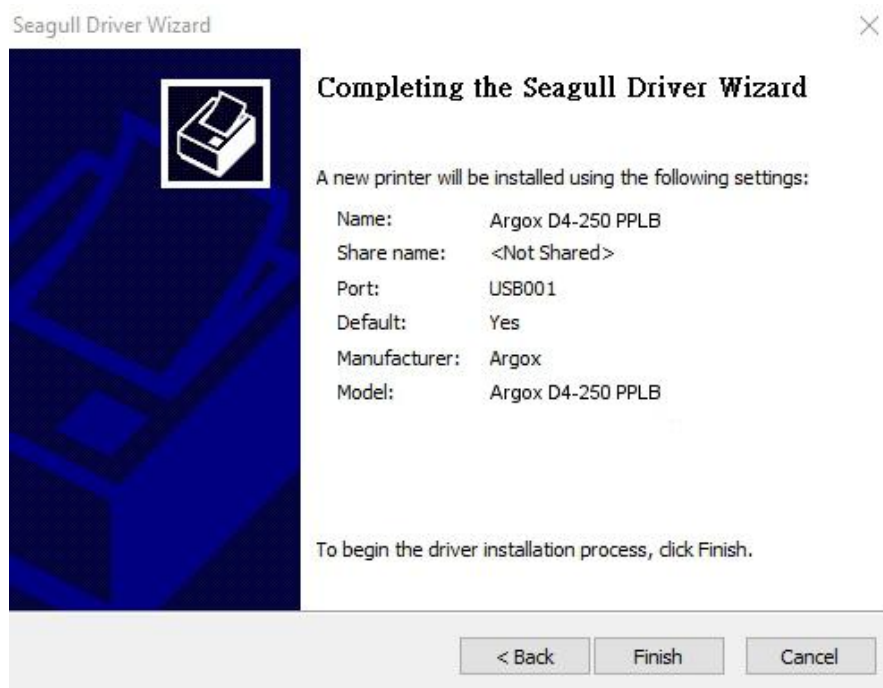

Seagull Driver Wizard

**Completing the Seagull Driver Wizard**


A new printer will be installed using the following settings:

Name:	Argox D4-250 PPLB
Share name:	<Not Shared>
Port:	USB001
Default:	Yes
Manufacturer:	Argox
Model:	Argox D4-250 PPLB


To begin the driver installation process, click Finish.

< Back    Finish    Cancel

9. After the related files have been copied to your system, click "Finish".

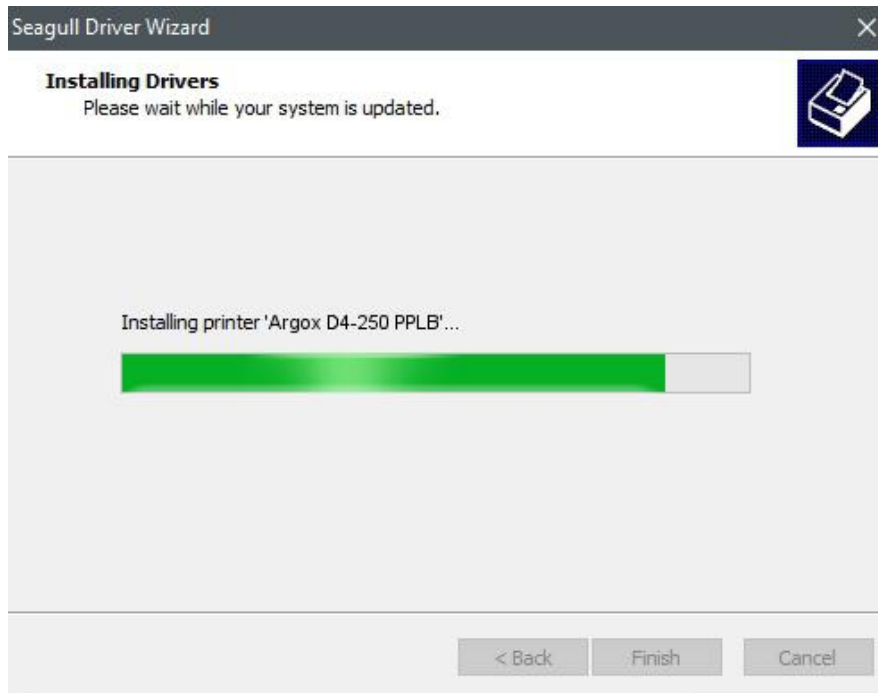

10. After driver installation is complete, click "Close". The driver should now be installed.

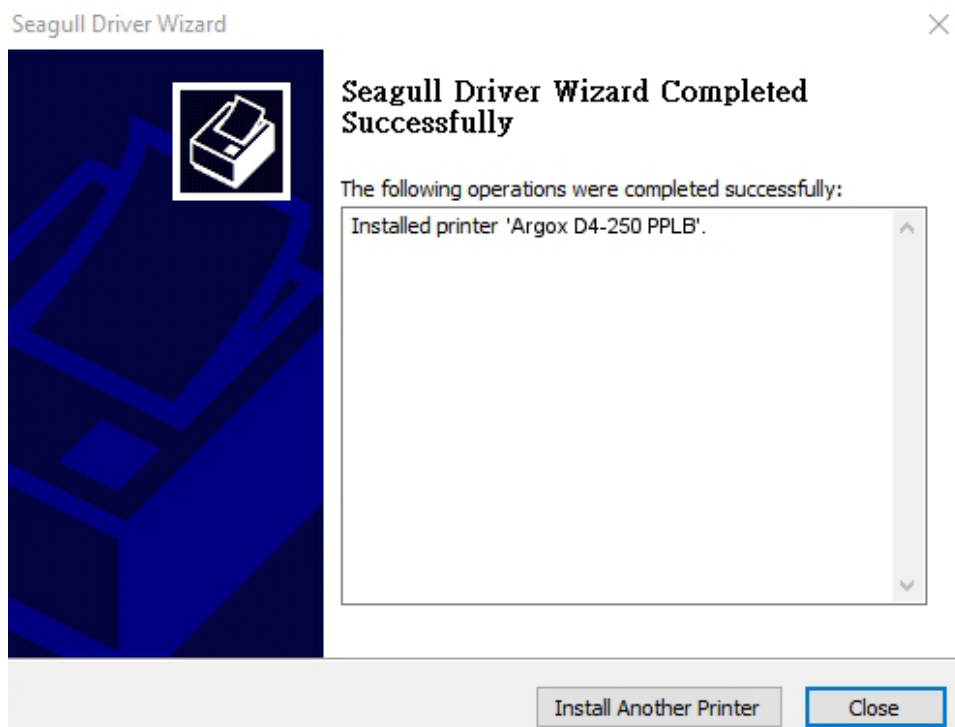


## 3.5.2 Installing a Printer Driver (for other interfaces except USB)

1. Turn off the printer. Plug the power cable into the power socket on the wall, and then connect the other end of the cable to printer's power socket. Connect the Parallel cable, Serial cable, or Ethernet cable to the proper port on the printer and on your computer.
2. Run the driver from Argox website. On the prompt, Windows Printer Driver, select "I accept..." and click "Next".



3. Assign the directory to keep Seagull driver, (for example: C:\Seagull) and click "Next".

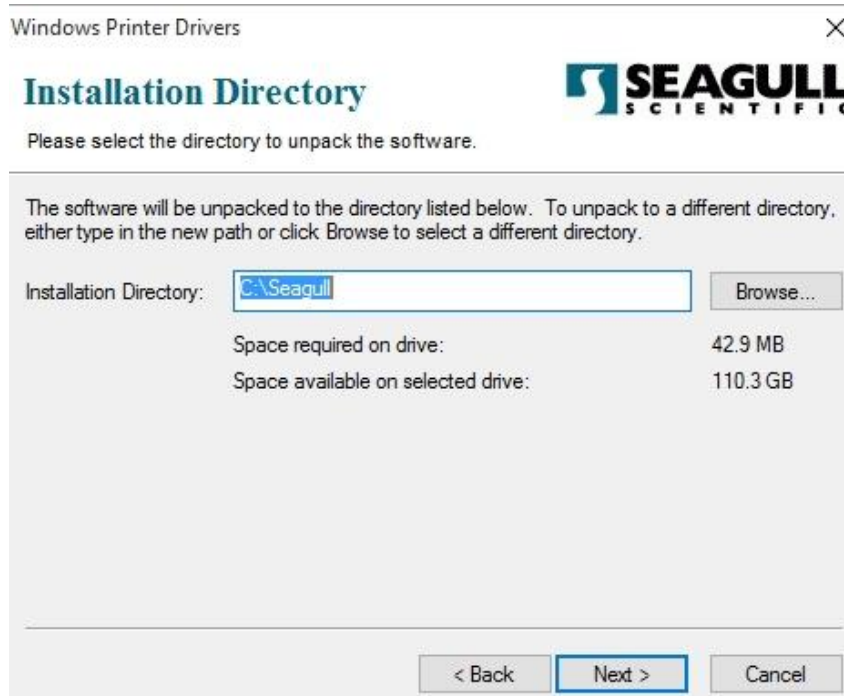


4. Click "Finish".



## 5. Select Install printer drivers and Click "Next"




## 6. Make sure printer is connected to PC, select "Other" and click "Next":

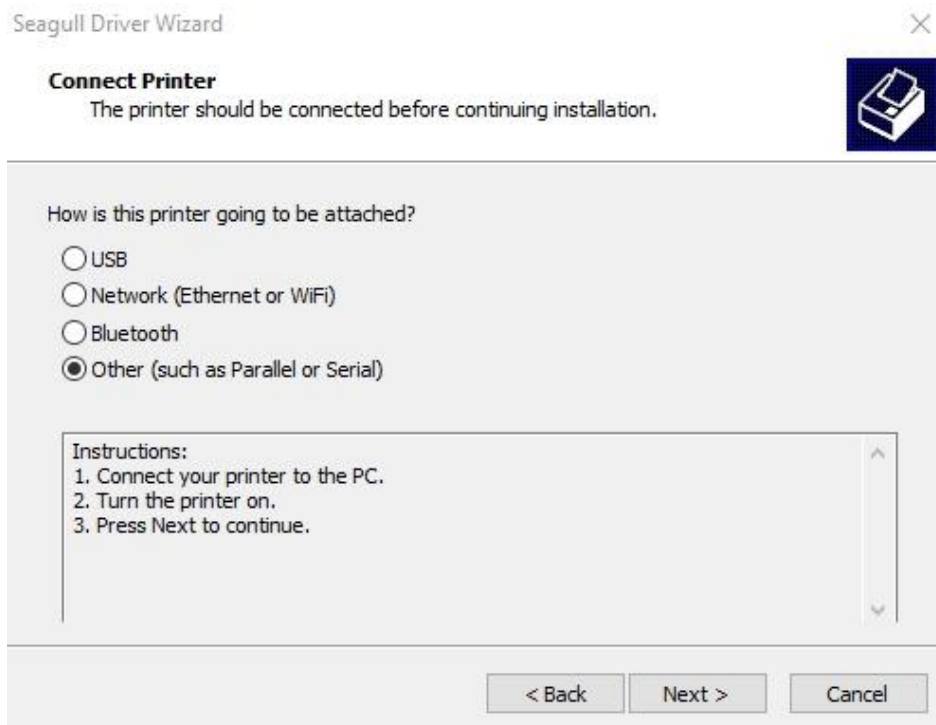


- 7. Select model & emulation - the following examples are based on model D4-250

PPLB:

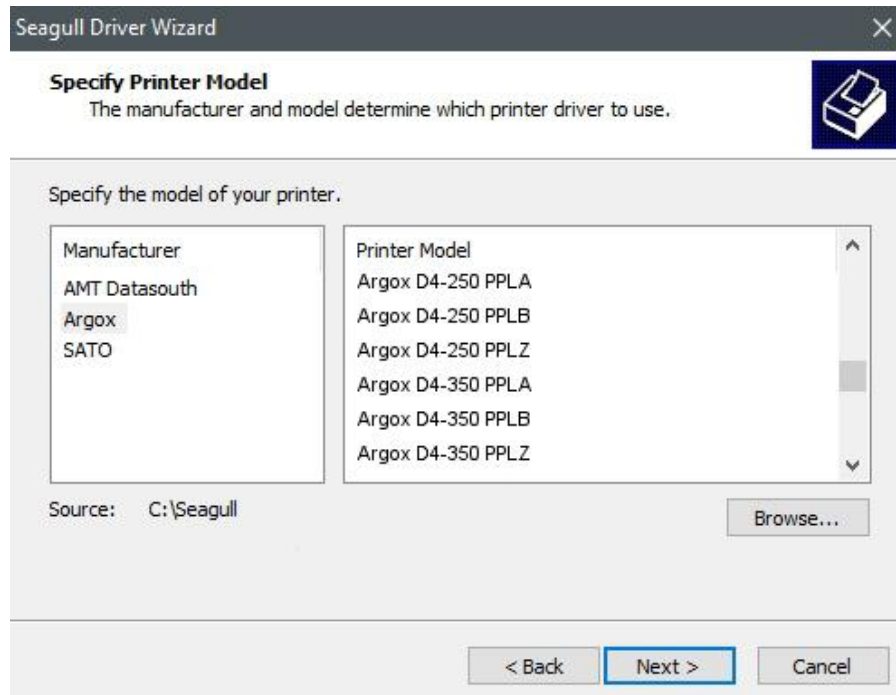


- 8. Select the port of the printer and click "Next".

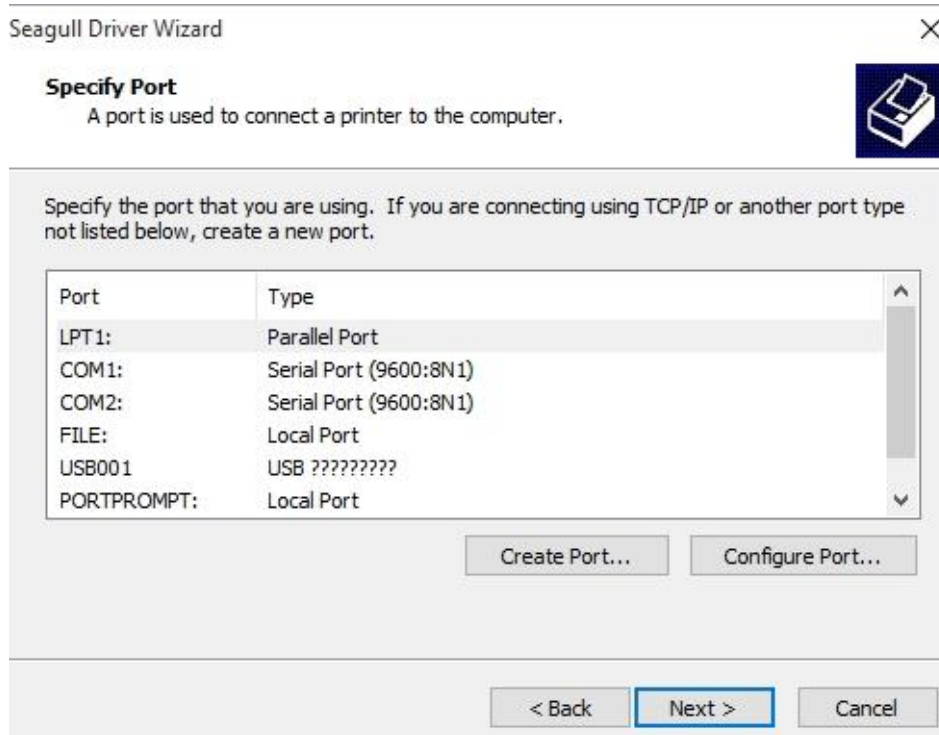



9. Enter Printer name (i.e. Argox D4-250 PPLB) and select "do not share this printer", and click "Next".

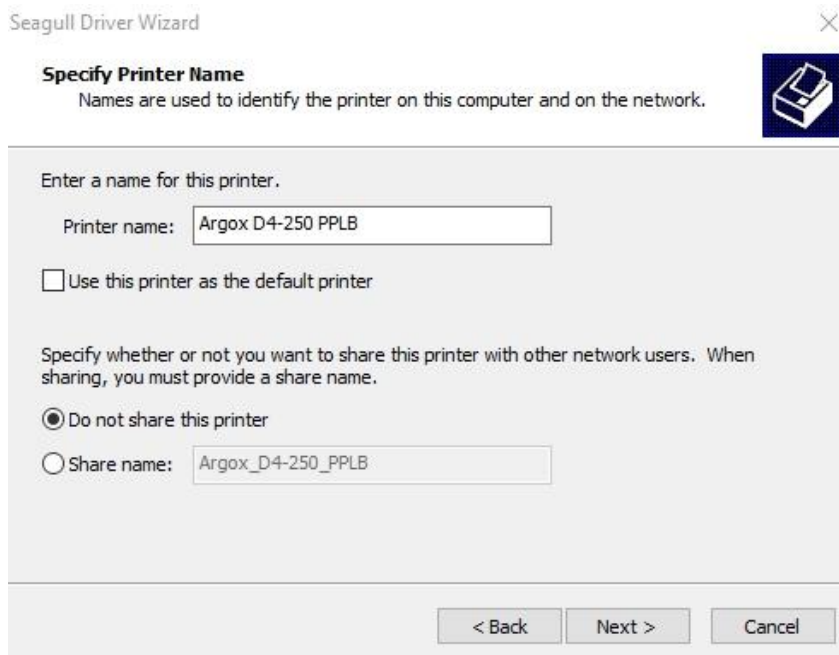

Seagull Driver Wizard

**Specify Printer Name**  
Names are used to identify the printer on this computer and on the network.

Enter a name for this printer.

Printer name:

Use this printer as the default printer


Specify whether or not you want to share this printer with other network users. When sharing, you must provide a share name.

Do not share this printer

Share name:

< Back    Next >    Cancel

10. Check all the data on the showing screen, if it is correct, click "Finish".

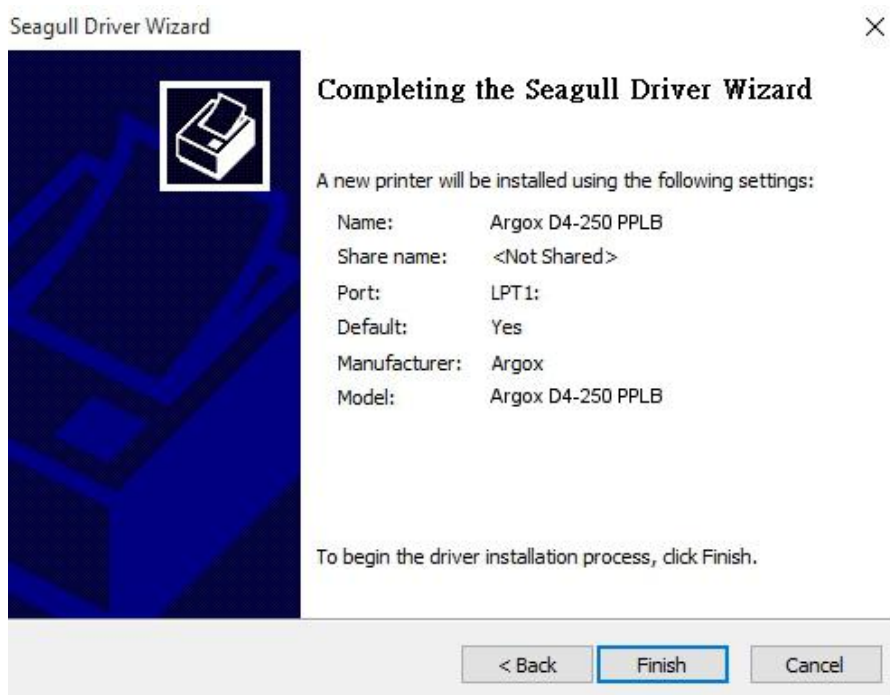

Seagull Driver Wizard

**Completing the Seagull Driver Wizard**


A new printer will be installed using the following settings:

Name:	Argox D4-250 PPLB
Share name:	<Not Shared>
Port:	LPT1:
Default:	Yes
Manufacturer:	Argox
Model:	Argox D4-250 PPLB


To begin the driver installation process, click Finish.

< Back    **Finish**    Cancel

11. After the related files have been copied to your system, click "Finish".

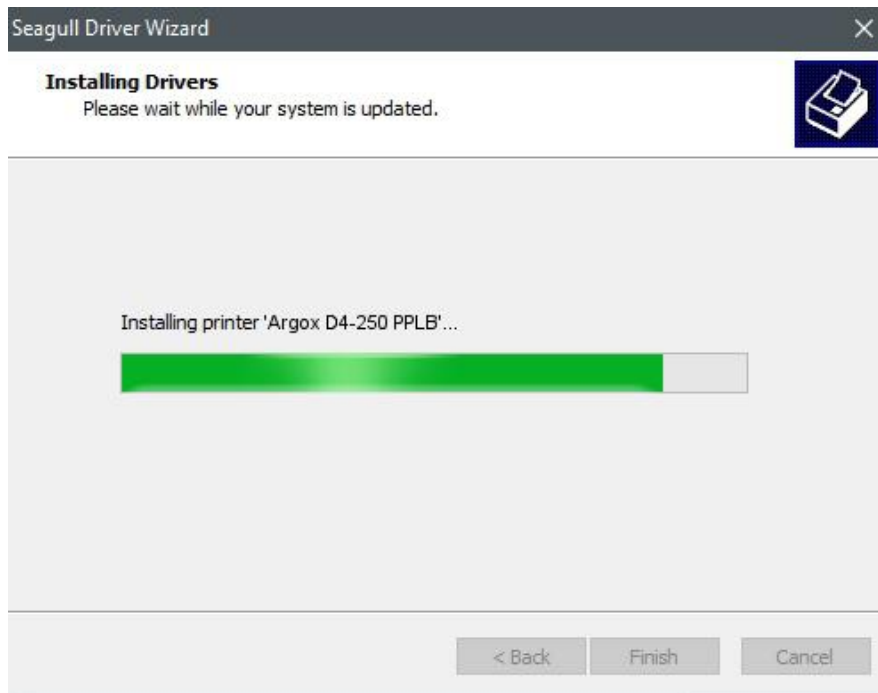

12. After driver installation is complete, click "Close". The driver should now be installed.

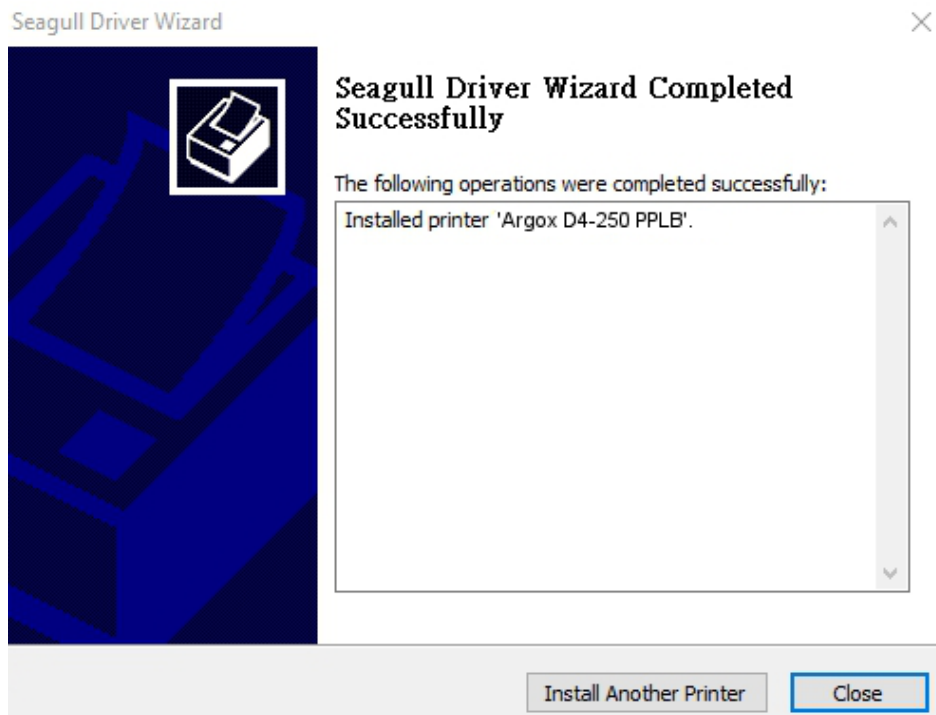

# 4 Maintenance

This chapter describes routine cleaning procedure.

## 4.1 Cleaning

To maintain print quality and prolong the printer's life, you need to perform some routine maintenance. Daily maintenance should be done for high volume printing, and weekly for low volume printing.



**Caution** Always turn off the printer before cleaning.

### 4.1.1 Printhead


It is essential to keep printhead clean if you want the best print quality. We strongly recommend that you clean the printhead when you load a new media roll. If the printer is operated in critical environment, or the print quality declines, you need to clean the printhead more frequently.

Keep in mind these things before you clean:

- Keep the water away in case of corrosion on heating elements.
- If you just finish printing, wait until the printhead cools down.
- Do not touch the printhead with bare hands or hard objects.

Cleaning steps:

1. Moisten a soft cloth or a cotton swab with ethyl alcohol.
2. Gently wipe the printhead in one direction. That is, wipe it only from left to right or vice versa. Do not wipe back-and-forth, in case dust or dirt attaches to the printhead again.

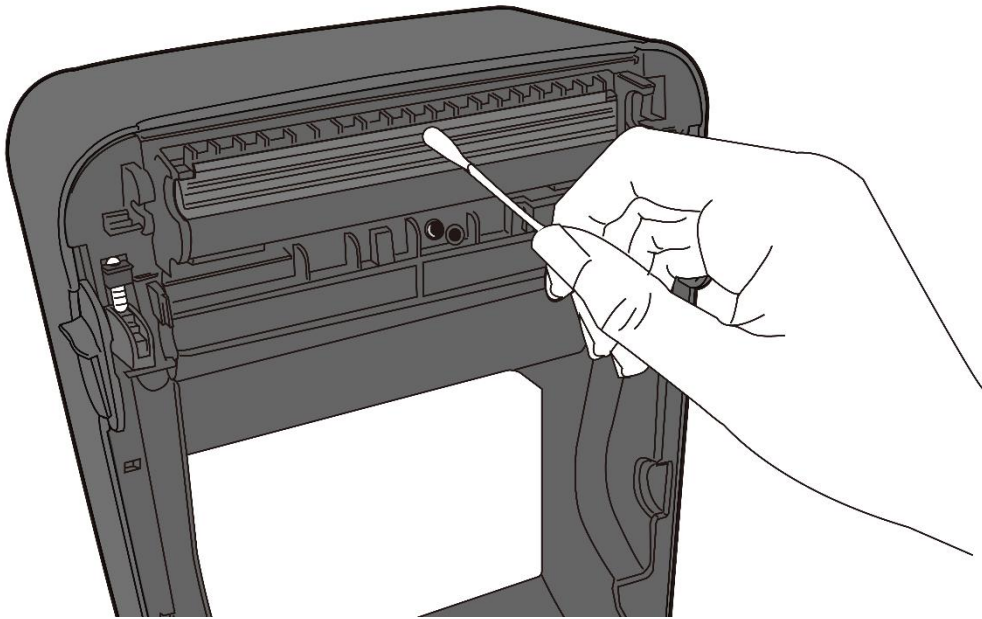


**Important** Printhead warranty becomes void if printhead's serial number is removed, altered, defected, or made illegible, under every circumstance.

## 4.1.2 Media housing

Use a soft cloth to clean the dust, dirt or debris built up on the **Media Roll Holders**, **Media Guides** and media path.


1. Moisten a soft cloth with ethyl alcohol.
2. Wipe the **Media Roll Holders** to clean dust.
3. Wipe the **Media Guides** to clean dust and dirt.
4. Wipe the media path to clean paper debris.

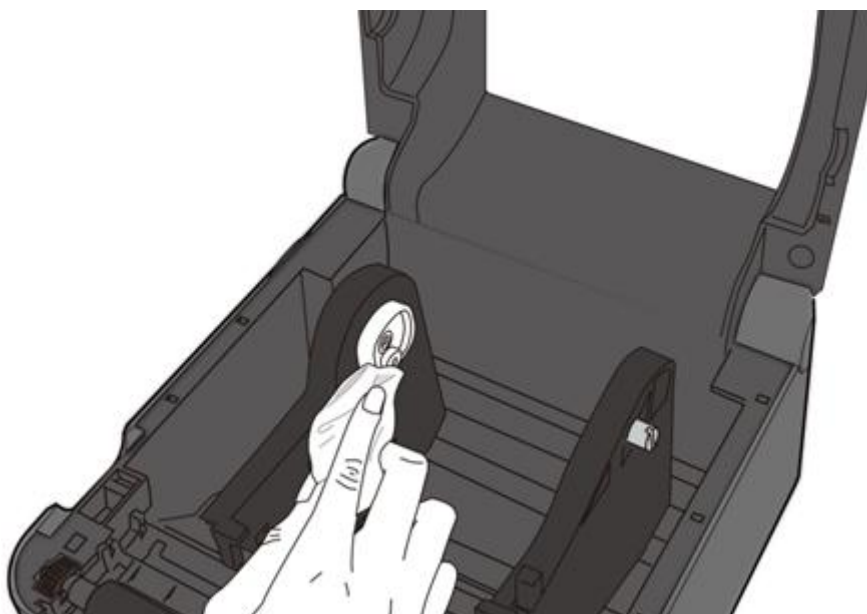

### 4.1.3 Sensor

Media sensors may not be able to detect the media correctly if it becomes dirty.


1. Moisten a soft cloth or a cotton swab with absolute ethyl alcohol.
2. Gently brush sensors to remove the dust away.
3. Use a dry cloth to clean the residue.

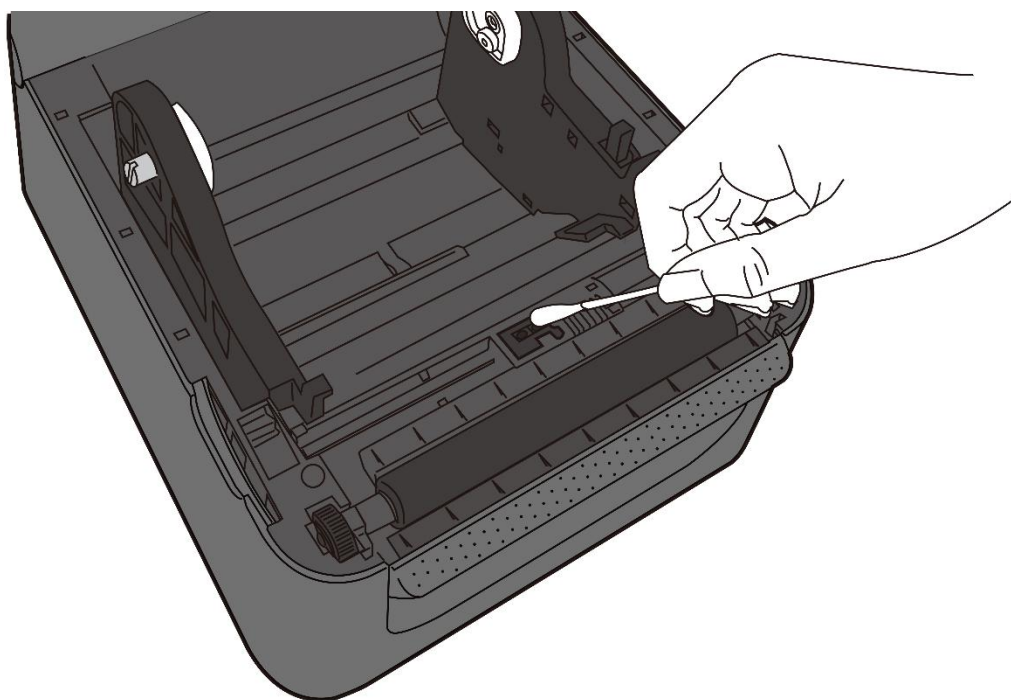

### 4.1.4 Platen roller

The platen roller is also important for print quality. Dirty platen roller may damage the printhead. Clean the platen roller right away if the adhesive, dirt or dust accumulates on it.

1. Moisten a soft cloth with absolute ethyl alcohol.
2. Gently wipe the platen roller to remove the dust and adhesive.

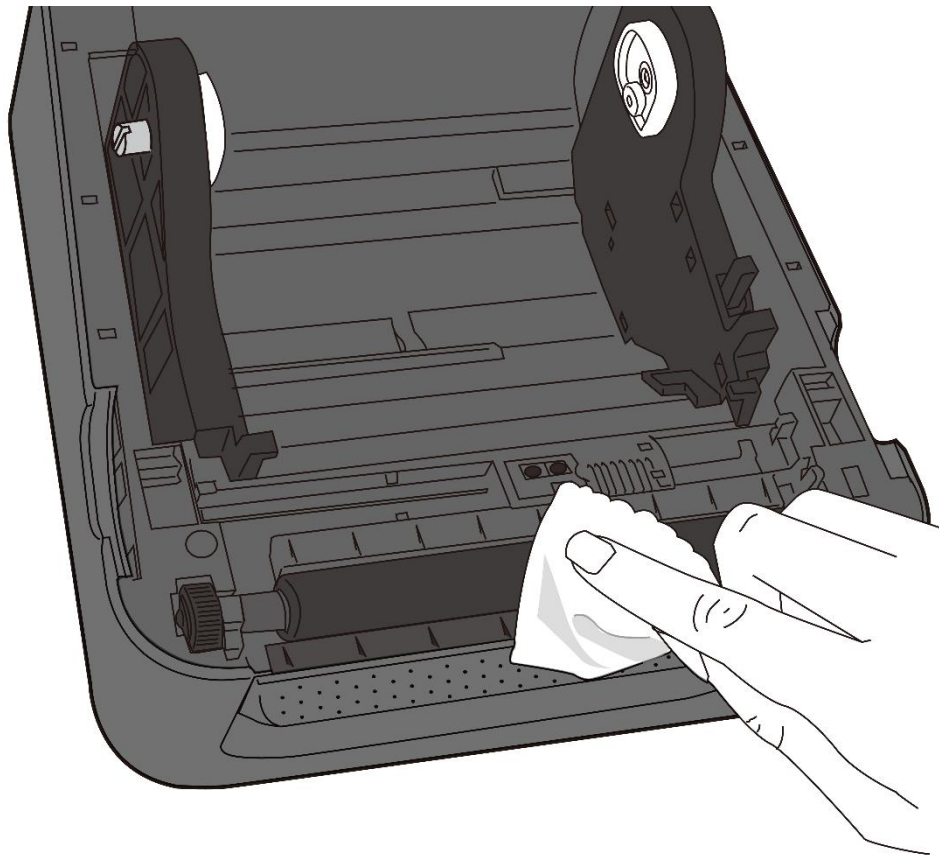

# 5 Troubleshooting

This chapter provides the information about printer problems and solutions.

## 5.1 Printer issues

### The printer won't turn on

- Did you attach the AC power cord?
- Make sure the power supply's connector is inserted into the printer power jack.
- Check the power connection from the wall socket to the printer. Test the power cord and the socket with other electrical devices.
- Disconnect the printer from the wall socket, and connect it again.

### The printer turns itself off

- Turn on the printer again.
- Make sure the power supply's connector and the power cord are properly plugged.
- Make sure the power supply and the power cord are not damaged.
- Use the applicable power supply.
- If the printer keeps turning itself off, check the socket and make sure it has enough power for the printer.

### The printer does not feed the media out

- The media is not loaded correctly. See Section 2.3, "Loading Media" to reload the media.
- If there is a paper jam, clear it.

## 5.2 Media issues

### The media is out

- Load a new media roll.

### The paper is jammed

- Open the printer and clear the jammed paper.
- Make sure the paper is held properly by the **Media Guides**.

### The printing position is not correct

- Did you use the correct media type for printing?
- The media is not loaded correctly. See Section 2.3, “Loading Media” to reload the media.
- The media sensor needs to be calibrated. See Section 3.1, “Media Sensor Calibration” to calibrate the sensor.
- The media sensor is dirty. Clean the media sensor.

### Nothing is printed

- The media is not loaded correctly. See Section 2.3, “Loading Media” to reload the media.
- The print data might not be sent successfully. Make sure the interface is set correctly in the printer driver, and send the print data again.

### The print quality is poor

- The printhead is dirty. Clean the printhead.
- The platen roller is dirty. Clean the platen roller.
- Adjust the print darkness, or lower the print speed.
- The media is incompatible for the printer. Use ARGOX-approved media roll instead.



## 5.3 Other issues

### **There are broken lines in the printed label**

- The printhead is dirty. Clean the printhead.

### **An error occurred when writing data to the USB memory**

- Did you insert the USB drive?
- Make sure the USB drive is plugged tightly into the port.
- The USB drive might be broken. Replace it with another one.

### **The printer is unable to save files due to insufficient USB memory**

- Delete the files on your USB drive to free some space, or replace your USB drive with an empty one.

### **The printhead temperature is extremely high**

- The printhead temperature is controlled by the printer. If it is extremely high, the printer will stop printing automatically, until the printhead is cool down. After that, the printer will resume printing automatically, if there is any unfinished print job.

### **The printhead is broken**

- Contact your local dealer for assistance.

# 6 Specifications

This chapter provides specifications for the printer. Specifications are subject to change without notice.

## 6.1 Printer

Model	D4-250	D4-350
<b>Print method</b>	Direct Thermal	
<b>Resolution</b>	203 dpi (8 dots/mm)	300 dpi (12 dots/mm)
<b>Media Alignment</b>	Centered	
<b>Operation Mode</b>	Standard: Continuous <b>mode</b> , Tear-off <b>mode</b> Optional: Cutter <b>mode</b> , Peeler <b>mode</b>	
<b>Sensor</b>	Media Sensor: Gap Sensor (Transmissive, Fixed) Sensor (Reflective, Movable) Head Open Switch	
<b>Print Speed</b>	2, 3, 4, 5, 6 inches/sec (50.8, 76.2, 101.6, 127, 152.4 mm/sec) 2 & 3 ips for peel off mode	2, 3, 4 inches/sec (50.8, 76.2, 101.6 mm/sec) 2 & 3 ips for peel off mode
<b>Print Darkness</b>	Darkness level – PPLB: SD 0 ~ 30 Default – PPLB: SD 8	
<b>Max Printable Area</b>	Max. 100"	Max. 50"
<b>Print Ratio</b>	Average print ratio within 15 % or less (whole print layout area) Full width with 1 mm pitch is required	
<b>Interface</b>	USB (Type A and Type B), Ethernet	
<b>Optional Interface</b>	RS-232C, Centronics (SPP Mode), Wireless LAN, Bluetooth	
<b>Programming Language</b>	PPLA+PPLB+PPLZ	
<b>Accessories</b>	Peeler, Full Cutter, Partial Cutter, RTC, External Media Stand	
<b>On-Board Memory</b>	Standard Memory (Flash ROM): 16 MB User Memory: 8 MB	

---

	Standard Memory (SDRAM): 32 MB
<b>External Memory</b>	USB: Max 16 GB
<b>Panel</b>	2 LED, 1 Button
<b>LED</b>	1 <sup>st</sup> LED: Red and Green (Various Combinations: Amber) 2 <sup>nd</sup> LED: Red and Green (Various Combinations: Amber)
<b>Agency Listing</b>	CE, FCC, UL/cULus, RoHS, BSMI

---

## 6.2 Media

Properties	Description
<b>Media Size</b>	<b>Continuous Mode</b> Length: 8 mm ~ 997 mm Width: 22.4 mm ~ 115 mm (including liner 25.4 ~ 118 mm)
	<b>Tear-Off Mode</b> Length: 30 mm ~ 997 mm Width: 22.4 mm ~ 115 mm (including liner 25.4 ~ 118 mm)
	<b>Peel-Off Mode</b> Length: 35 mm ~ 150.4 mm Width: 22.4 mm ~ 115 mm (including liner 25.4 ~ 118 mm)
	<b>Cut Mode</b> Length: 35 mm ~ 993 mm Width: 22.4 mm ~ 115 mm (including liner 25.4 ~ 118 mm) Max Roll Diameter Size: 127 mm (5 inches) Max Roll Diameter Size for External Media Stand: 203.2 mm (8 inches)
<b>Media Type</b>	Direct Thermal Label Direct Thermal Tag Roll Paper (Inside Wound or Outside Wound) Fanfold Paper

## 6.3 Fonts, Barcodes, and Graphics

### Specification

The specifications of fonts, bar codes and graphics depends on the printer emulation. The emulations PPLA, PPLB, and PPLZ are printer programming languages, through which the host can communicate with your printer.

#### Printer Programming Language PPLA

Programming Language	PPLA
Internal fonts	9 fonts with different point size 6 fonts with ASD smooth font. Courier font with different symbol sets.
Symbol sets (Code pages)	Courier font symbol set: Roman-8, ECMA-94, PC, PC-A, PC-B, Legal, and PC437 (Greek), Russian.
Soft fonts	Downloadable soft fonts by Print Tool
Font size	1x1 to 24x24 times
Character rotation	0, 90, 180, 270 degree, 4 direction rotation
Graphics	PCX, BMP, IMG, GDI and HEX format files
1D Barcodes	Code 39、UPC-A、UPC-E、Code 128 subset A/B/C、EAN-13、EAN-8、HBIC、Codabar、Plessey、UPC2、UPC5、Code 93、Postnet、UCC/EAN-128、, UCC/EAN-128 K-MART、UCC/EAN-128 Random weight、Telepen、FIM、Interleaved 2 of 5 (Standard/with modulo 10 checksum/ with human readable check digit/ with modulo 10 checksum & shipping bearer bars) 、GS1 Data bar (RSS)
2D Barcodes	MaxiCode、PDF417、Data Matrix (ECC 200 only) 、QR code、Composite Codes、Aztec

## Printer Programming Language PPLB

Programming Language	PPLB
Internal fonts	5 fonts with different point size
Symbol sets (Code pages)	8 bits code page : 437, 850, 852, 860, 863, 865, 857, 861, 862, 855, 866, 737, 851, 869, 1252, 1250, 1251, 1253, 1254, 1255 7 bits code page: USA, BRITISH, GERMAN, FRENCH, DANISH, ITALIAN, SPANISH, SWEDISH and SWISS
Soft fonts	Downloadable soft fonts by Print Tool
Font size	1x1 to 24x24 times
Character rotation	0, 90, 180, 270 degree, 4 direction rotation
Graphics	PCX , Binary Raster, BMP and GDI
1D Barcodes	Code 39、UPC-A、UPC-E、Matrix 2 of 5、UPC-Interleaved 2 of 5、 Code 39 with check sum digit 、Code 93、EAN-13、EAN-8 (Standard, 2 /5digit add-on) 、Codabar、Postnet、Code128 subset A/B/C、 Code 128 UCC (shipping container code) 、 Code 128 auto、UCC/EAN code 128 (GS1-128) 、Interleave 2 of 5、Interleaved 2 of 5 with check sum、Interleaved 2 of 5 with human readable check digit、German Postcode、Matrix 2 of 5、UPC Interleaved 2 of 5、EAN-13 2/5 digit add-on、UPCA 2/5 digit add-on、UPCE 2/5 digit add-on、 GS1 Data bar (RSS)
2D Barcodes	MaxiCode、PDF417、Data Matrix (ECC 200 only) 、QR code、 Composite Codes、Aztec

## Printer Programming Language PPLZ

Programming Language	PPLZ
Internal fonts	8 (A~H) fonts with different point size. 8 AGFA fonts: 7 (P~V) fonts with fixed different point size (not scalable). 1 (0) font with scaling point size.
Symbol sets (Code pages)	USA1, USA2, UK, HOLLAND, DENMARK/NORWAY, SWEDEN/FINLAND, GERMAN, FRANCE1, FRANCE2, ITALY, SPAIN, MISC, JAPAN, IBM850, Multibyte Asian Encodings, UTF-8, UTF-16 Big-Endian, UTF-16 Little-Endian, Code page 1250, 1251, ,1252, 1253, 1254
Soft fonts	Downloadable soft fonts by Print Tool
Font size	1x1 to 10x10
Character rotation	0, 90, 180, 270 degree, 4 direction rotation
Graphics	GRF, Hex and GDI
1D Barcodes	Code39、UPC-A、UPC-E、Postnet、Code128 subset A/B/C、 Interleave 2 of 5、 Interleaved 2 of 5 with check sum、 Interleaved 2 of 5 with human readable check digit、Code 93、Code 39 with check sum digit、 MSI、EAN-8、Codabar、Code 11、EAN-13、Plessey、GS1 Data bar (RSS) 、Industrial 2 of 5、Standard 2 of 5、Logmars
2D Barcodes	MaxiCode、PDF417、Data Matrix (ECC 200 only) 、QR code、 Composite Codes、Aztec

## 6.4 Wireless LAN(Optional)

Properties		Wireless LAN I/F				
Hardware	Protocol	IEEE 802.11 b/g/n				
	Enabled Device	WIRELESS PRINTER				
	Operating Temperature	-20°C ~ +85°C				
	Destination	USA	Europe			
	Frequency (Center Channel)	2412 ~ 2462 MHz	2412 ~ 2472 MHz			
	Channel	1 ~ 11 ch	1 ~ 13 ch			
	Spacing	5 MHz				
	Transmission Speed/Modulation	IEEE 802.11b	Transmission Method	Conforming to IEEE 802.11b DSSS method		
			Channel	Depending on the country		
			Data Transmission Speed/Modulation	11/5.5 Mbps: CCK 2 Mbps: DQPSK 1 Mbps: DBPSK		
			IEEE 802.11g	Transmission Method	Conforming to IEEE 802.11g OFDM method DSSS method	
				Channel	Depending on the country	
				Data Transmission Speed/Modulation	54/48 Mbps: 64 QAM 36/24 Mbps: 16 QAM 18/12 Mbps: QPSK 9/6 Mbps: BPSK	
IEEE 802.11n		Transmission Method	Conforming to IEEE802.11n OFDM method			
		Channel	(US)1-11ch (JP/DE)1-13ch			
		Data Transmission Speed/Modulation	20MHz : 6.5M / 7.2M / 13M / 14.4M / 19.5M / 21.7M / 26M /28.9M / 39M / 43.3M / 52M / 57.8M / 58.5M / 65M /			



Properties		Wireless LAN I/F		
		72.2M(Auto-sensing)		
Antenna	External antenna			
Aerial power	802.11b	Max +15 dBm		
	802.11g	Max +17 dBm		
	802.11n	Max +17 dBm		
<b>Software</b>	Connection mode	Infrastructure, Adhoc		
	Default IP Address	192.168.1.1		
	Default Subnet Mask	255.255.0.0		
	Default ESSID	WIRELESS PRINTER		
	Security	IEEE 802.11i		
		Cryptography	WEP 128 bit, TKIP (WPA), AES (WPA2)	
		Authorization	Open Key (for WEP), PSK	
		Protocol (*)	TCP/IP, Socket, DHCP	
		Wireless LAN Parameter Setting and Status Monitor	Parameter Setting: Command (PC Setting Tool)	

## 6.5 Bluetooth (Optional)

Properties	Bluetooth I/F
Standard	Bluetooth 2.1
Enable Device	BT PRINTER
Operating Temperature	41°F (5°C) ~ 104°F (40°C)
Storage Temperature	-4°F (-20°C) ~ 140°F (60°C)
Operating Humidity	25 ~ 85 % Non-condensing R.H
Storage Humidity	10 ~ 90 % Non-condensing R.H
Connection Form	Only one-to-one connection is supported.
Support Profile	Serial Port Profile (SPP) PIN code is supported.
Class of Radio Transmission	CLASS 2
Transmission Method	Bi-directional (Half-duplex)
Flow Control	Credit based flow control
Operating Mode	Slave Mode
Transmission Distance	10 m without obstacles *2 (360 degrees)
SR Mode in Page/Inquiry Scanning	R1 Scan Interval 1.28 sec. Scan Window 22.5 msec.
RF Frequency Range	2402 ~ 2480 MHz
Nominal Output Power	+4 dBm (2.51 mW) MAX
Communications	Support BT 2.1 on Android connectivity

## 6.6 Ethernet

Properties	Description
Port	RJ-45
Speed	10Base-T/100Base-T (Auto Detecting)
Protocol	ARP, IP, ICMP, UDP, TCP, HTTP, DHCP, Socket, LPR, IPv4, SNMPv2
Mode	TCP Server/Client, UDP Client
Technology	HP Auto-MDIX, Auto-Negotiation

## 6.7 Electrical and operating environment

Properties	Range
Power Supply	Voltage: AC 100 V ~ 240 V $\pm$ 10 % (full range) Frequency: 50 Hz - 60 Hz $\pm$ 5 %
Power Consumption	60W
Temperature	Operating: 5 °C ~ 40 °C Storage: -40 °C ~ 60 °C
Humidity	Operating: 25 %RH ~ 85 %RH (non-condensing) Storage: 10 %RH ~ 90 %RH (non-condensing)

## 6.8 Physical dimension


Dimension	Size and Weight
Size	W 183.5 mm x D 225.5 mm x H 165.9 mm
Weight	Approx. 1.75kg

## 6.9 Interfaces

This section provides information about IO port specifications for the printer.

### 6.9.1 USB


There are two common USB connectors. Typically, type A is found on hosts and hubs; type B is found on devices and hubs. The figure below shows their pinouts.

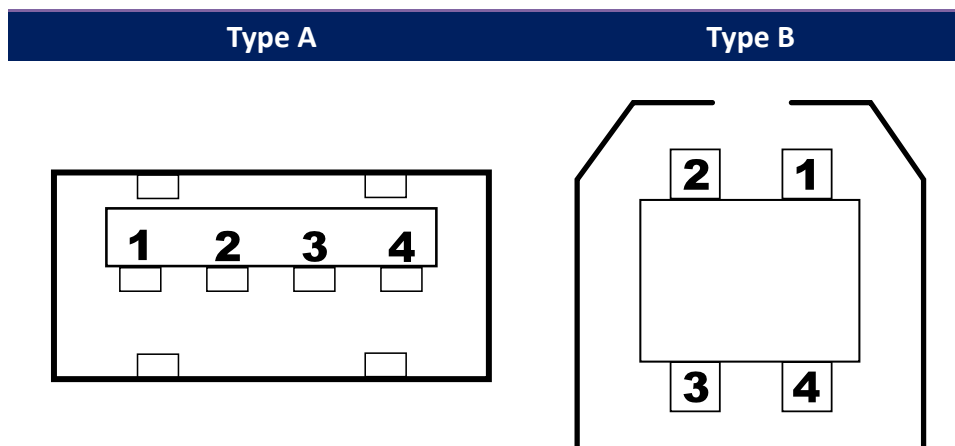

Pin	Signal	Description
1	VBUS	+5V
2	D-	Differential data signaling pair -
3	D+	Differential data signaling pair +
4	Ground	Ground

## 6.9.2 Ethernet


The Ethernet uses RJ-45 cable, which is 8P8C (8-Position 8-Contact). The figure below shows its pinout.

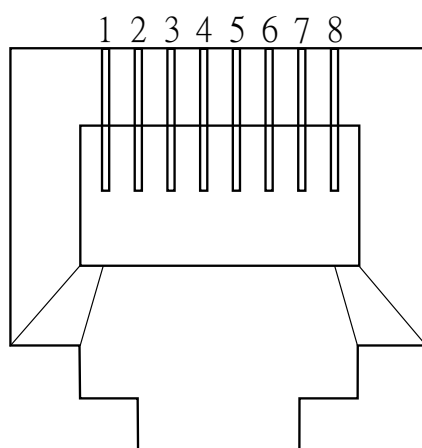

Pin	Signal
1	Transmit+
2	Transmit-
3	Receive+
4	Reserved
5	Reserved
6	Receive-
7	Reserved
8	Reserved

### 6.9.3 RS-232C

The RS-232C on the printer is DB9 female. It transmits data bit by bit in asynchronous start-stop mode. The figure below shows its pinout.

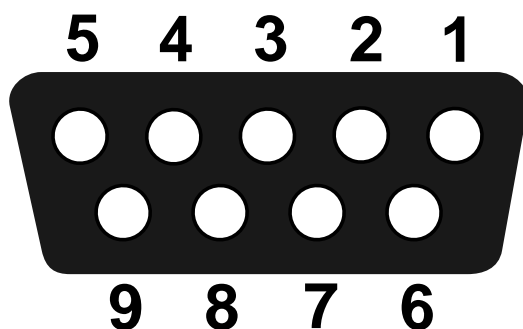

Pin	Signal	Description
1	NA	No Function
2	TxD	Transmit
3	RxD	Receive
4	NA	No Function
5	GND	Ground
6	NA	No Function
7	CTS	Clear to Send
8	RTS	Request to Send
9	NC	No Connection

Host (DB9)			Printer (DB9)		
Signal	Description	Pin	Pin	Description	Signal
CD	Carrier Detect	1	1	No Function	NC
RxD	Receive	2	2	Transmit	RxD
TxD	Transmit	3	3	Receive	TxD
DTR	Data Terminal Ready	4	4	No Function	NC
GND	Ground	5	5	Ground	GND
DSR	Data Set Ready	6	6	No Function	NC
RTS	Request to Send	7	7	Clear to Send	RTS
CTS	Clear to Send	8	8	Request to Send	CTS
CI		9	9	No Function	NC